



## 14. Oil Temperature Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

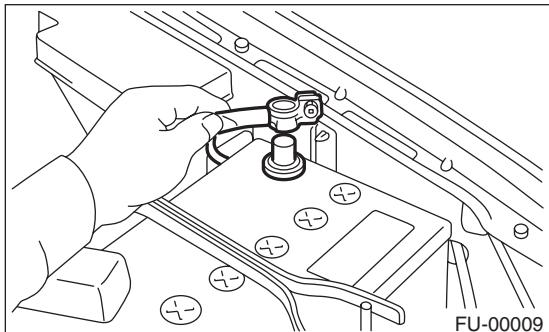

- 2) Remove the air intake chamber. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Chamber.>
- 3) Remove the engine harness connector from the bracket.
- 4) Disconnect the connector from the oil temperature sensor.
- 5) Remove the oil temperature sensor.

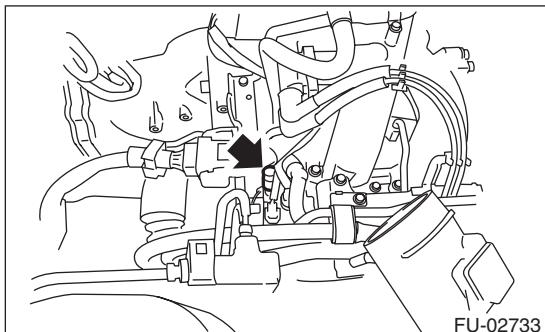

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**18 N·m (1.8 kgf·m, 13.3 ft-lb)**