


Front Oxygen (A/F) Sensor

FUEL INJECTION (FUEL SYSTEMS)


15. Front Oxygen (A/F) Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.

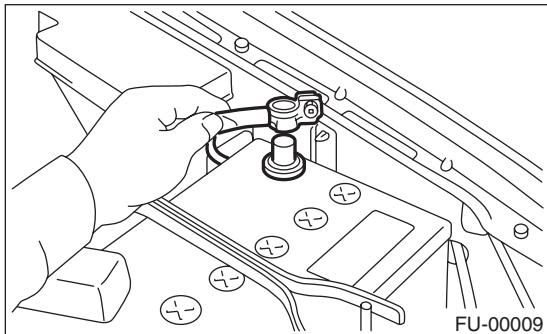

- 2) Remove the clip fastening the harness and disconnect the front oxygen (A/F) sensor connector.

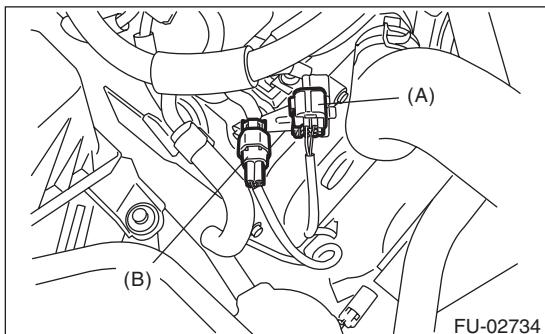


(A) Front oxygen (A/F) sensor connector
(B) Rear oxygen sensor connector

- 3) Lift-up the vehicle.
- 4) Remove the under cover.
- 5) Apply spray-type lubricant to the threaded portion of front oxygen (A/F) sensor, and leave it for one minute or more.
- 6) Remove the front oxygen (A/F) sensor.

CAUTION:

When removing the front oxygen (A/F) sensor, wait until exhaust pipe cools, because it can damage the exhaust pipe.

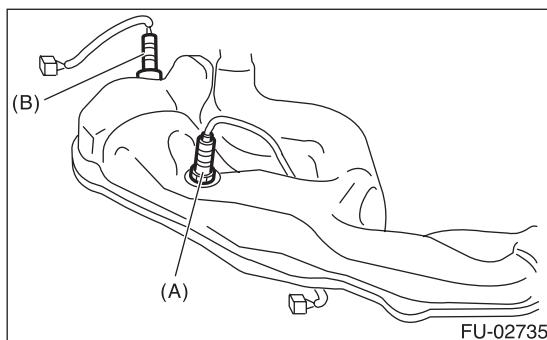

(A) Front oxygen (A/F) sensor connector
(B) Rear oxygen sensor connector

B: INSTALLATION

- 1) Before installing front oxygen (A/F) sensor, apply anti-seize compound only to the threaded portion of front oxygen (A/F) sensor to make the next removal easier.

Anti-seize compound:

NEVER-SEEZ NS-165 or the equivalent


CAUTION:

Never apply anti-seize compound to the protector of front oxygen (A/F) sensor.

- 2) Install the front oxygen (A/F) sensor.

Tightening torque:

21 N·m (2.1 kgf·m, 15.2 ft-lb)

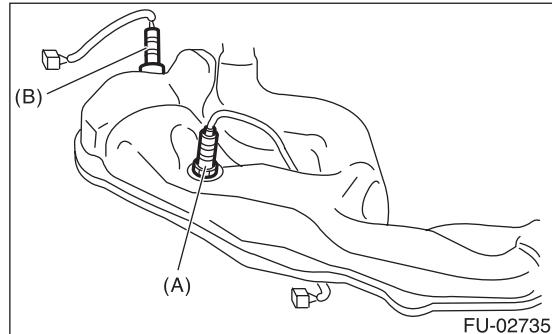


(A) Front oxygen (A/F) sensor
(B) Rear oxygen sensor

- 3) Install the under cover.

- 4) Lower the vehicle.

- 5) Connect the connector of front oxygen (A/F) sensor connector and fasten the harness with clips.

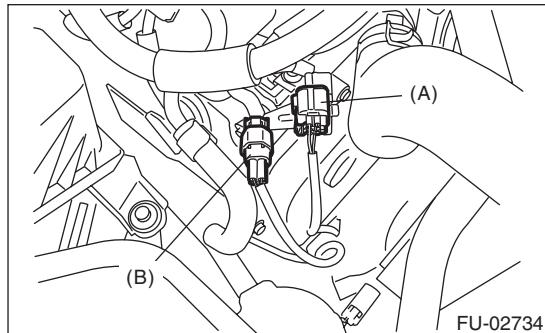

(A) Front oxygen (A/F) sensor connector
(B) Rear oxygen sensor connector

Front Oxygen (A/F) Sensor

FUEL INJECTION (FUEL SYSTEMS)

- 6) Connect the ground cable to battery.

