



## 2. Throttle Body

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

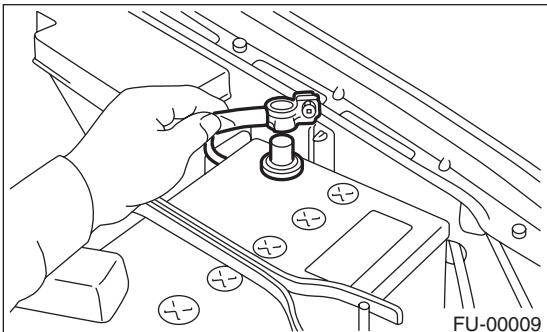

- 2) Remove the air intake chamber. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Chamber.>
- 3) Disconnect the connectors from throttle position sensor and manifold absolute pressure sensor.
- 4) Disconnect the engine coolant hoses from throttle body.
- 5) Remove the bolt which installs throttle body on intake manifold.

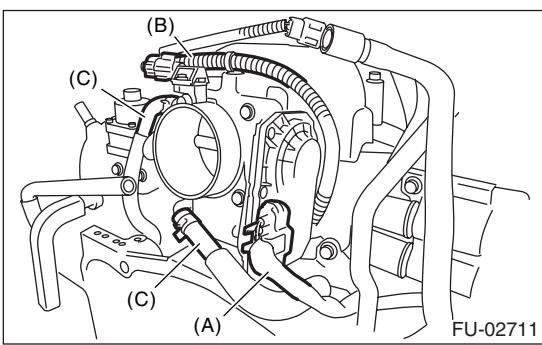

- (A) Throttle position sensor
- (B) Manifold absolute pressure sensor
- (C) Engine coolant hose

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

***Tightening torque:***

***8 N·m (0.8 kgf·m, 5.8 ft-lb)***