

## 25. Fuel Level Sensor

### A: REMOVAL


**WARNING:**

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel.


**NOTE:**

The fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly.  
<Ref. to FU(H4SO)-52, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from fuel pump bracket.

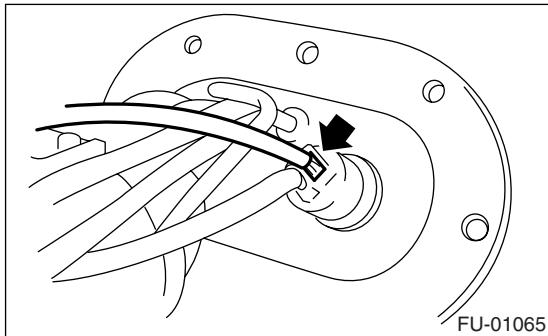

- 3) Remove the fuel temperature sensor (A).
- 4) Remove the bolt (B) which installs the fuel level sensor on the mounting bracket.

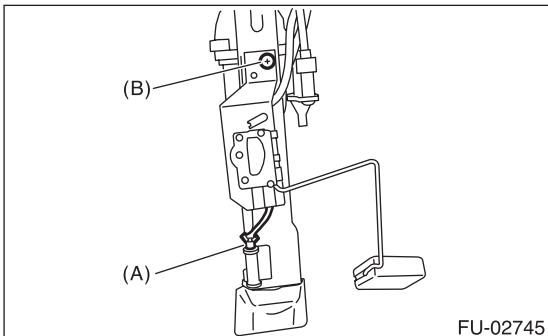

### B: INSTALLATION

Install in the reverse order of removal.