


26. Fuel Sub Level Sensor

A: REMOVAL

WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.

1) Disconnect the ground cable from battery.

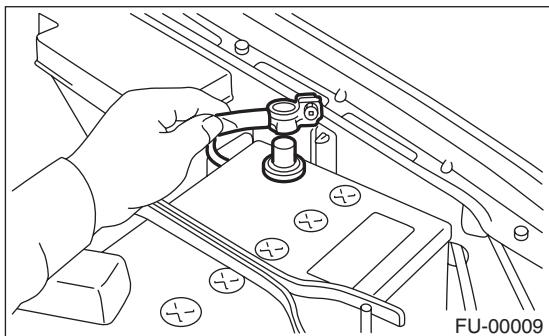


2) Lift-up the vehicle.

3) Drain fuel from fuel tank.

<Ref. to FU(H4SO)-44, DRAINING FUEL, PROCEDURE, Fuel.>


4) Remove the luggage floor mat. <Ref. to EI-48, REMOVAL, Luggage Floor Mat.>

5) Remove the service hole cover.

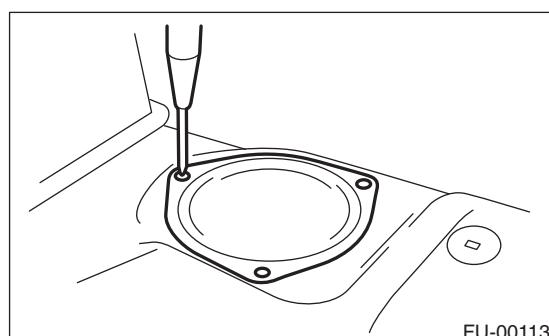


6) Disconnect the connector from fuel sub level sensor.


7) Disconnect the fuel jet pump hose.

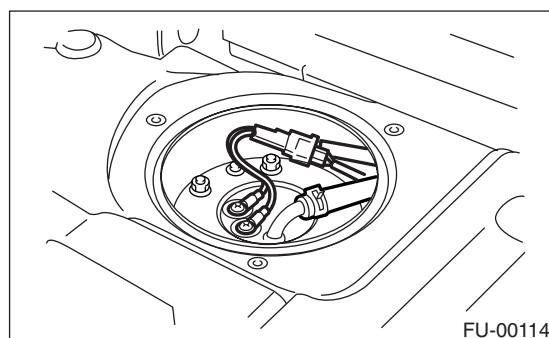

8) Remove the bolts which install fuel sub level sensor on fuel tank.

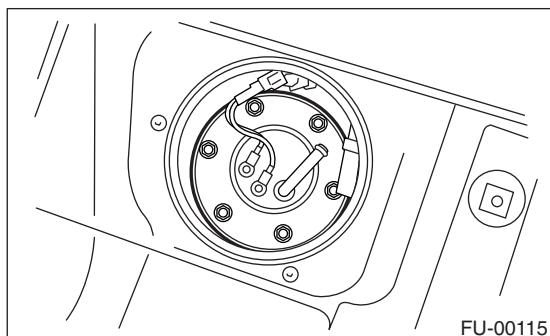

9) Remove the fuel sub level sensor.

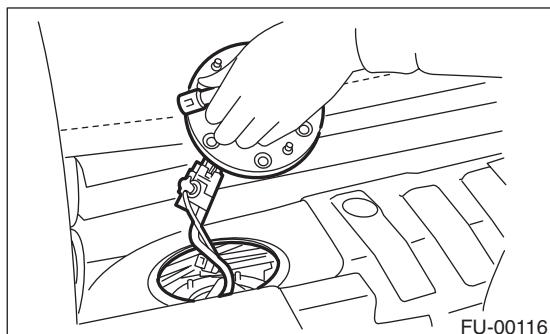

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

1. Make sure the sealing portion is free from fuel or foreign matter before installation.

2. Tighten the bolts in the sequence shown in the figure to the specified torque.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft·lb)

