


29. Fuel Damper Valve

A: REMOVAL

- 1) Release the fuel pressure.
<Ref. to FU(H4SO)-44, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Remove the fuel damper valve from the fuel delivery line and the fuel return line.

WARNING:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

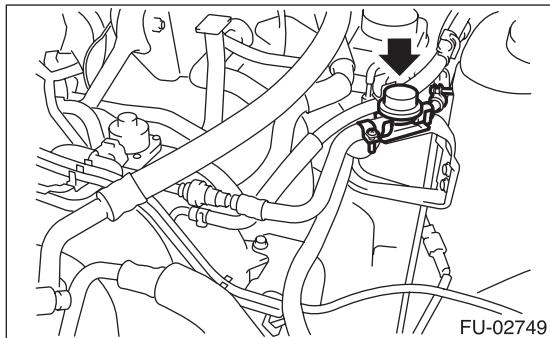

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1.25 N·m (0.13 kgf·m, 0.94 ft-lb)