


Engine Coolant Temperature Sensor

FUEL INJECTION (FUEL SYSTEMS)


4. Engine Coolant Temperature Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.

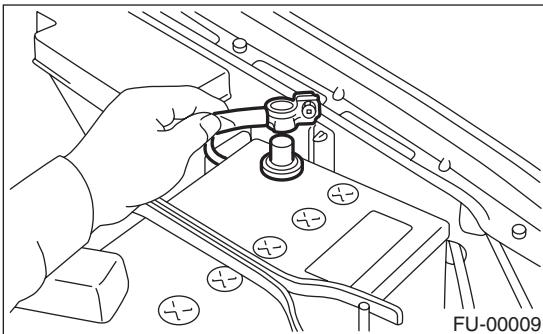

- 2) Remove the generator. <Ref. to SC(H4SO)-13, REMOVAL, Generator.>
- 3) Disconnect the connectors from the engine coolant temperature sensor.

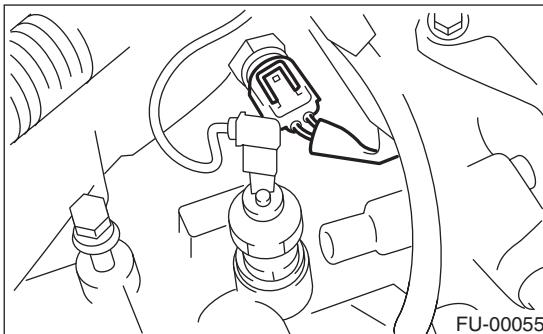

- 4) Remove the engine coolant temperature sensor.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

18 N·m (1.8 kgf·m, 13.0 ft-lb)