

10. Engine Mounting

A: REMOVAL

- 1) Remove the engine unit. <Ref. to ME(H4SO)-29, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from engine assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Engine mounting

35 N·m (3.6 kgf·m, 25.8 ft-lb)

C: INSPECTION

Make sure that no crack or other damages do not exist.