



4. Joint Pipe

A: REMOVAL


- 1) Disconnect the ground cable from battery.

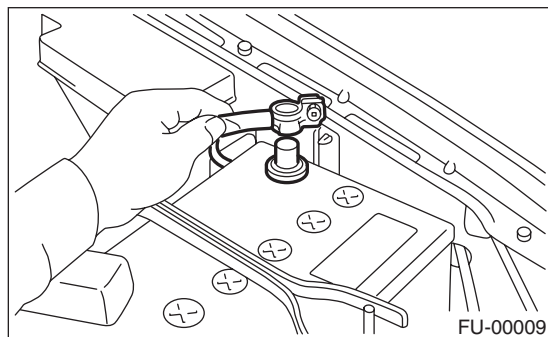

- 2) Remove the collector cover.
- 3) Remove the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-41, REMOVAL, Front Oxygen (A/F) Sensor.>
- 4) Remove the under cover.
- 5) Remove the exhaust manifold lower cover (RH).

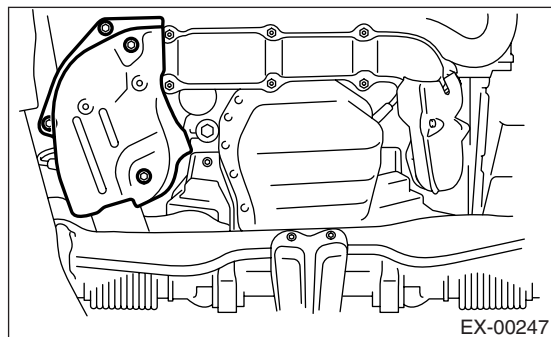

- 6) Remove the nuts which hold the front exhaust manifold to joint pipe.

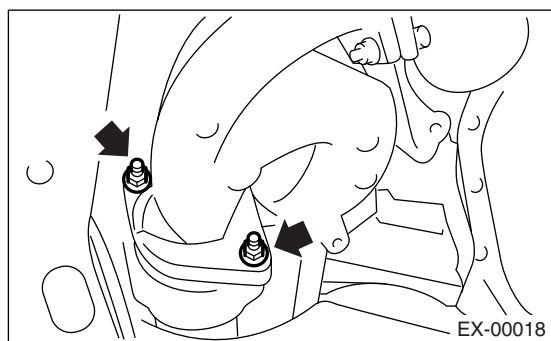

- 7) Remove the center exhaust pipe.
<Ref. to EX(H4DOTC)-7, REMOVAL, Center Exhaust Pipe.>
- 8) Remove the turbocharger. <Ref. to IN(H4DOTC)-12, REMOVAL, Turbocharger.>
- 9) Take off the joint pipe in the upward direction.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

T: 35 N·m (3.6 kgf-m, 26.0 ft-lb)

