


6. Muffler

A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

CAUTION:

Be careful, exhaust pipe is hot.

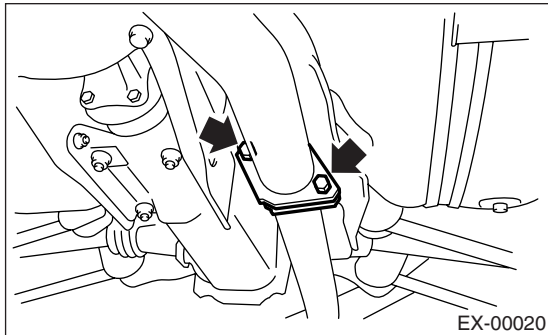


2) Remove the rubber cushion, and detach the muffler.

CAUTION:

Be careful not to drop the muffler during removal.

NOTE:

To facilitate removal, apply a coat of spray type lubricant to the mating area of rubber cushion in advance.

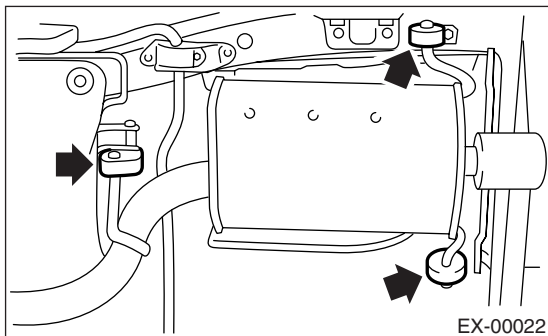

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Replace with a new gasket and nut.

Tightening torque:

48 N·m (4.9 kgf·m, 35.4 ft-lb)

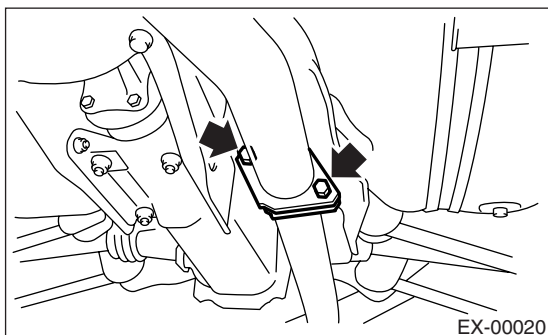

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

COOLING

CO(H4DOTC)

	Page
1. General Description	2

