

3. Ignition Coil and Ignitor Assembly

A: REMOVAL

Direct ignition type has been adopted. Refer to "Removing Spark Plugs" for removal procedures.
<Ref. to IG(H4DOTC)-4, REMOVAL, Spark Plug.>

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf-m, 11.7 ft-lb)

C: INSPECTION

Refer to the following for inspection procedures.
<Ref. to EN(H4DOTC)(diag)-59, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

Ignition Coil and Ignitor Assembly

IGNITION

STARTING/CHARGING SYSTEMS

SC(H4DOTC)

	Page
1. General Description	2