



2. Air Cleaner Case

A: REMOVAL

1) Disconnect the ground cable from battery.

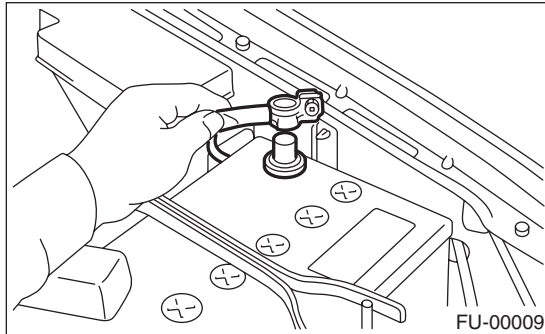


2) Disconnect the connector from mass air flow sensor.

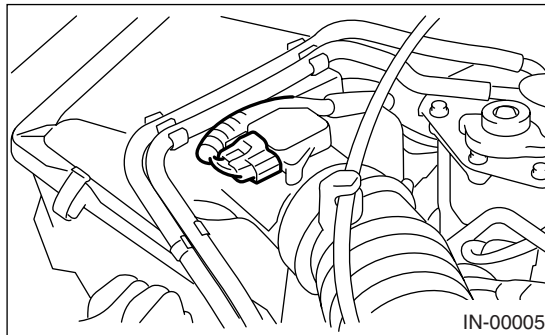

3) Loosen the clamps (A) which connect the air intake boot and the intake duct.


4) Remove the clip (B) from air cleaner upper cover.

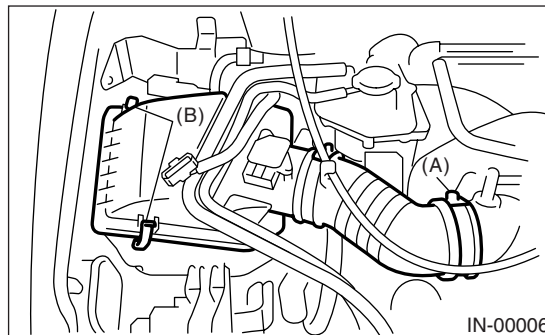

5) Remove the air cleaner upper cover.

6) Remove the air cleaner element.

7) Remove the air cleaner lower case.

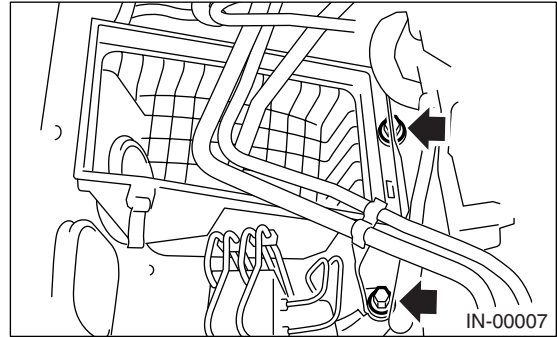


B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

33 N·m (3.4 kgf-m, 24.6 ft-lb)

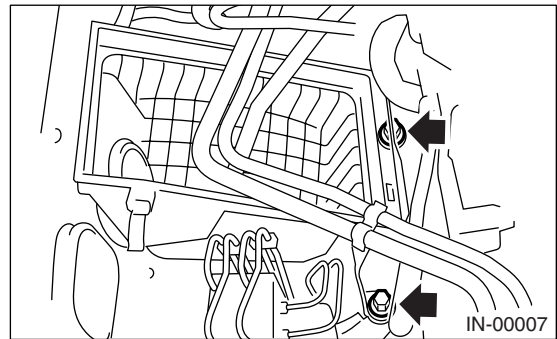

NOTE:

Before installing the air cleaner upper cover, align the protrusion with the hole of air cleaner lower case, and then secure the upper cover and lower case.

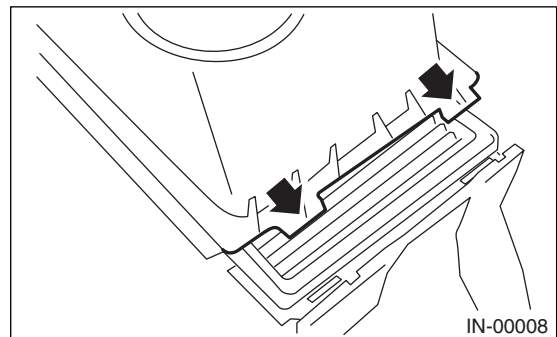

C: INSPECTION

Replace if excessively damaged or dirty.