


Intercooler

INTAKE (INDUCTION)


5. Intercooler

A: REMOVAL



- 1) Remove the collector cover.
- 2) Disconnect the PCV hose from PCV pipe.

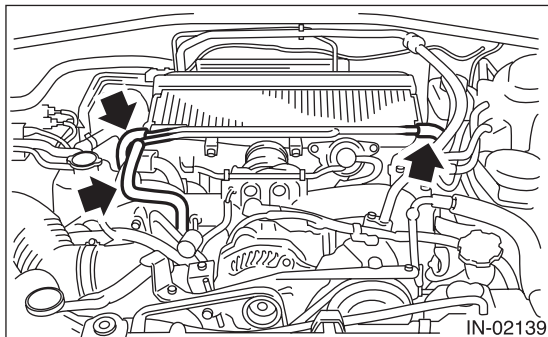

- 3) Remove the air by-pass valve from intercooler.

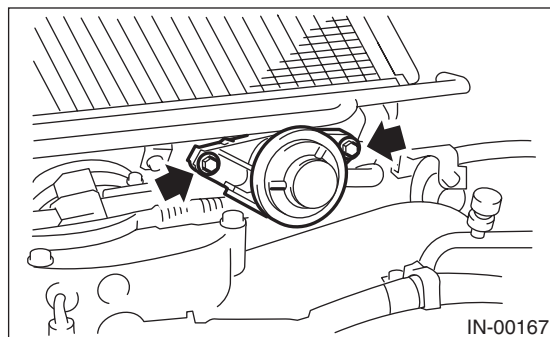


- 4) Remove the bolts which secure the intercooler to the bracket.

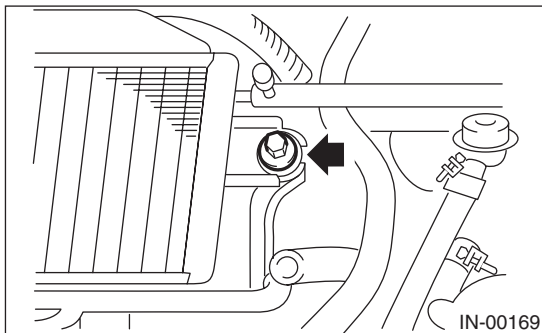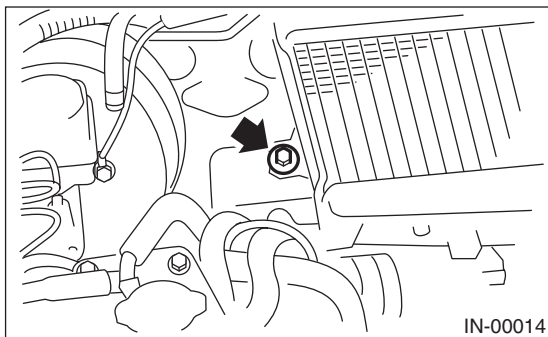

- 5) Loosen the clamps (A) which connect the turbo-charger and intercooler duct.

- 6) Loosen the clamps (B) which connect the throttle body and intercooler.

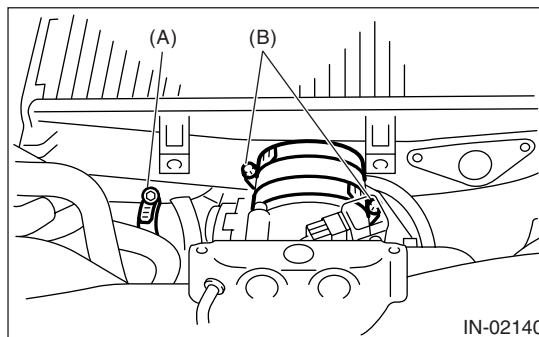



- 7) Separate the intercooler duct from turbocharger.
- 8) Remove the intercooler sensor from throttle body.

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

16 N·m (1.6 kgf-m, 11.6 ft-lb)

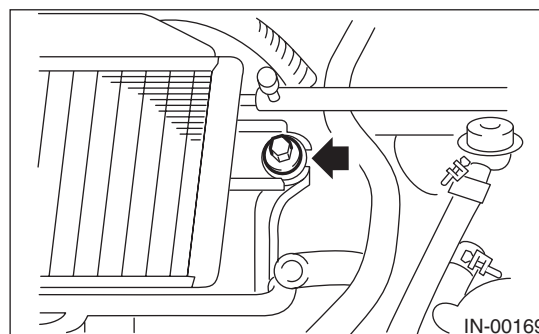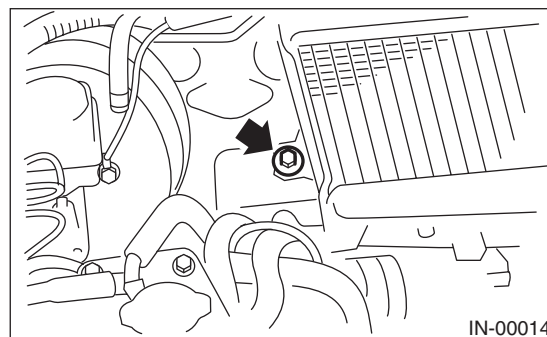


C: DISASSEMBLY


1) Remove the air by-pass valve from intercooler.

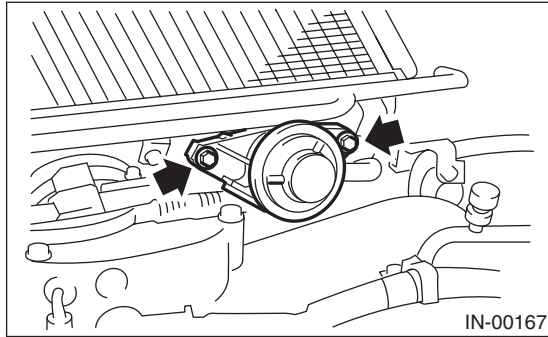

2) Remove the intercooler ducts from intercooler.

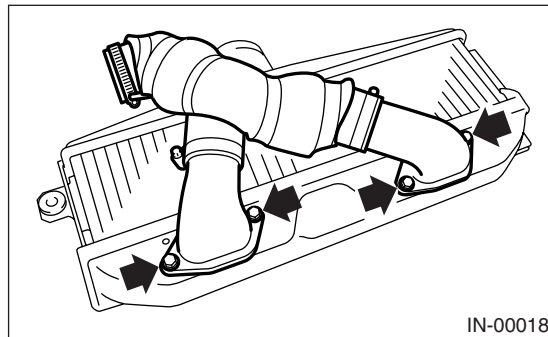

3) Separate the duct.

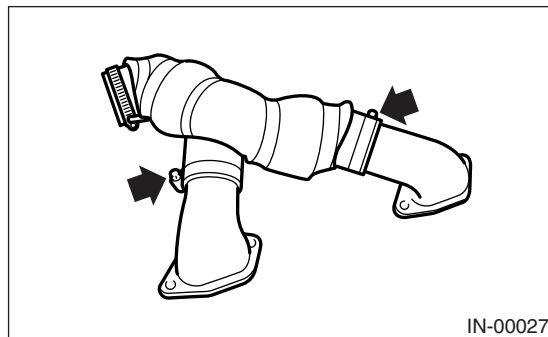

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:

Be careful not to pinch the O-ring.

Tightening torque:

16 N·m (1.6 kgf-m, 11.6 ft-lb)

