

## 10.Engine Mounting

### A: REMOVAL

- 1) Remove the engine unit. <Ref. to ME(H4DOTC)-30, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from engine assembly.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

##### *Engine mounting:*

**35 N·m (3.6 kgf-m, 25.8 ft-lb)**

### C: INSPECTION

Make sure that no crack or other damage do not exists.