

21.Intake and Exhaust Valve

A: REMOVAL AND INSTALLATION

Refer to “19. Cylinder Head” for work relating to the intake and the exhaust valves.

<Ref. to ME(H4DOTC)-57, REMOVAL, Cylinder Head.> <Ref. to ME(H4DOTC)-57, INSTALLATION, Cylinder Head.>