25.Engine Trouble in General A: INSPECTION

NOTE:

"RANK" shown in the chart refers to the possibility of the cause of trouble in order "Very often" to "Rarely"

A— Very often

B— Sometimes

C— Rarely

Symptom	Problem parts etc.	Possible cause	RANK
Engine does not start.		·	
1) Starter does not turn.	Starter	Defective battery-to-starter harness	В
		Defective starter switch	С
		Defective inhibitor switch or neutral switch	С
		Defective starter	В
	Battery	Improper connection of terminal	Α
		Run-down battery	Α
		Defective charging system	В
	Excessive friction	Seizure of crankshaft and connecting rod bearing	С
		Seized camshaft	С
		Seized or stuck piston and cylinder	С
2) Initial combustion does	Starter	Defective starter	С
not occur.	Engine control system <ref.< td=""><td>to EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.<>	to EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
	Fuel line		Α
			В
	Timing belt		В
		-	В
	Compression	Incorrect valve clearance	С
	'	Loosened spark plug or defective gasket	С
			С
		· · · · · · · · · · · · · · · · · · ·	C
			С
			В
			C
			В
		-	В
3) Initial combustion occurs.	Engine control system < Ref	7 7 7	A
o) iiiilai compaction cocare.	Intake system		В
			В
	Fuel line	Seizure of crankshaft and connecting rod bearing Seized camshaft Seized or stuck piston and cylinder Per Defective starter The control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""> Defective fuel pump and relay Lack of or insufficient fuel Degradation, etc. Defective timing Pression Incorrect valve clearance Loosened spark plug or defective gasket Loosened cylinder head bolt or defective head gasket Improper valve sealing Defective valve stem Worn or broken valve spring Worn or stuck piston rings, cylinder and piston Incorrect valve timing Improper engine oil (low viscosity) Pression Defective intake manifold gasket Defective throttle body gasket Defective fuel pump and relay Clogged fuel line Lack of or insufficient fuel</ref.>	C
	ruei iiile		С
			В
	Timing belt		В
	Timing ben		В
	Compression		С
	Compression		C
			С
			С
			С
			В
			С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В

Symptom	Problem parts etc.	Possible cause	RANK
Engine stalls after initial combustion.	Engine control system <ref. td="" to<=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
	Intake system	Loosened or cracked intake duct	В
		Loosened or cracked PCV hose	С
		Loosened or cracked vacuum hose	С
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Dirty air cleaner element	С
	Fuel line	Clogged fuel line	С
		Lack of or insufficient fuel	В
	Timing belt	Degradation, etc.	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
	Compression	Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В
2. Rough idle and engine	Engine control system < Ref. to	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	A
	Intake system	Loosened or cracked intake duct	A
stall	intake system	Loosened or cracked PCV hose	A
		Loosened or cracked vacuum hose	A
			В
		Defective intake manifold gasket	
		Defective throttle body gasket	B C
	Defective PCV valve Loosened oil filler cap Dirty air cleaner element		
			В
		С	
	Fuel line	Defective fuel pump and relay	С
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	Timing belt	Defective timing	С
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	В
		Loosened cylinder head bolt or defective head gasket	В
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	Α
		Improper engine oil (low viscosity)	В
	Lubrication system	Incorrect oil pressure	В
		Defective rocker cover gasket	С
	Cooling	Overheating	С
	Others	Evaporative emission control system malfunction	Α
		Stuck or damaged throttle valve	В
		Accelerator cable out of adjustment	С

Symptom	Problem parts etc.	Possible cause	RANK
2. Low output, hesitation and	Engine control system <ref. td="" to<=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
poor acceleration	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	В
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	Α
	Fuel line	Defective fuel pump and relay	В
		Clogged fuel line	В
		Lack of or insufficient fuel	С
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	В
	Compression	Loosened spark plug or defective gasket	В
		Loosened cylinder head bolt or defective head gasket	В
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	Α
		Improper engine oil (low viscosity)	В
	Lubrication system	Incorrect oil pressure	В
	Cooling	Overheating	С
		Over cooling	С
	Others	Evaporative emission control system malfunction	Α
4. Surging	Engine control system <ref. td="" to<=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	Α
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	В
	Fuel line	Defective fuel pump and relay	В
		Clogged fuel line	В
		Lack of or insufficient fuel	С
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	С
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	В
	Cooling	Overheating	В
	Others	Evaporative emission control system malfunction	С

Symptom	Problem parts etc.	Possible cause	RANK
5. Engine does not return to idle.	Engine control system <ref. td="" to<=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
	Intake system	Loosened or cracked vacuum hose	Α
	Others	Stuck or damaged throttle valve	Α
		Accelerator cable out of adjustment	В
6. Dieseling (Run-on)	Engine control system <ref. td="" to<=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
	Cooling	Overheating	В
	Others	Evaporative emission control system malfunction	В
7. After burning in exhaust	Engine control system <ref. td="" to<=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
system	Intake system	Loosened or cracked intake duct	С
		Loosened or cracked PCV hose	С
		Loosened or cracked vacuum hose	В
		Defective PCV valve	В
		Loosened oil filler cap	С
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	Α
	Lubrication system	Incorrect oil pressure	С
	Cooling	Over cooling	С
	Others	Evaporative emission control system malfunction	С
8. Knocking	Engine control system <ref. td="" to<=""><td>EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>	Α
	Intake system	Loosened oil filler cap	В
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	С
		Incorrect valve timing	В
	Cooling	Overheating	Α
9. Excessive engine oil con-	Intake system	Loosened or cracked PCV hose	Α
sumption		Defective PCV valve	В
		Loosened oil filler cap	С
	Compression	Defective valve stem	Α
		Worn or stuck piston rings, cylinder and piston	Α
	Lubrication system	Loosened oil pump attaching bolts and defective gas- ket	В
		Defective oil filter o-ring	В
		Defective crankshaft oil seal	В
		Defective rocker cover gasket	В
		Loosened oil drain plug or defective gasket	В
		Loosened oil pan fitting bolts or defective oil pan	В

Engine Trouble in General

MECHANICAL

Symptom	Problem parts etc.	Possible cause	RANK
10. Excessive fuel consump-	Engine control system <ref. basic="" diagnostic="" en(h4dotc)(diag)-2,="" procedure.="" to=""></ref.>		Α
tion	Intake system	Dirty air cleaner element	Α
	Timing belt	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plug or defective gasket	С
		Loosened cylinder head bolt or defective head gasket	С
		Improper valve sealing	В
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	В
	Lubrication system	Incorrect oil pressure	С
	Cooling	Over cooling	С