


General Description

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

1. General Description

A: COMPONENT

1. SECONDARY AIR PUMP

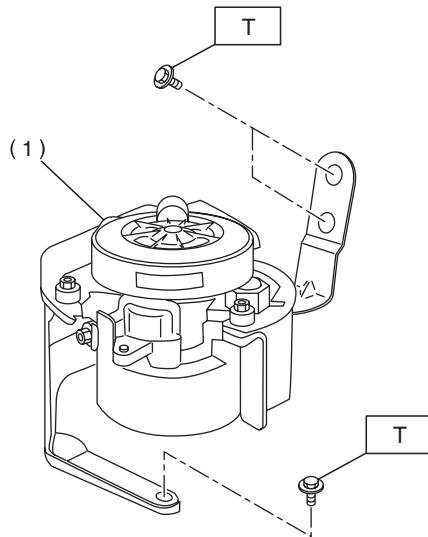

EC-02135

(1) Secondary air pump


Tightening torque: N·m (kgf·m, ft-lb)

T: 5 (0.5, 3.7)

General Description

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

2. SECONDARY AIR COMBINATION VALVE

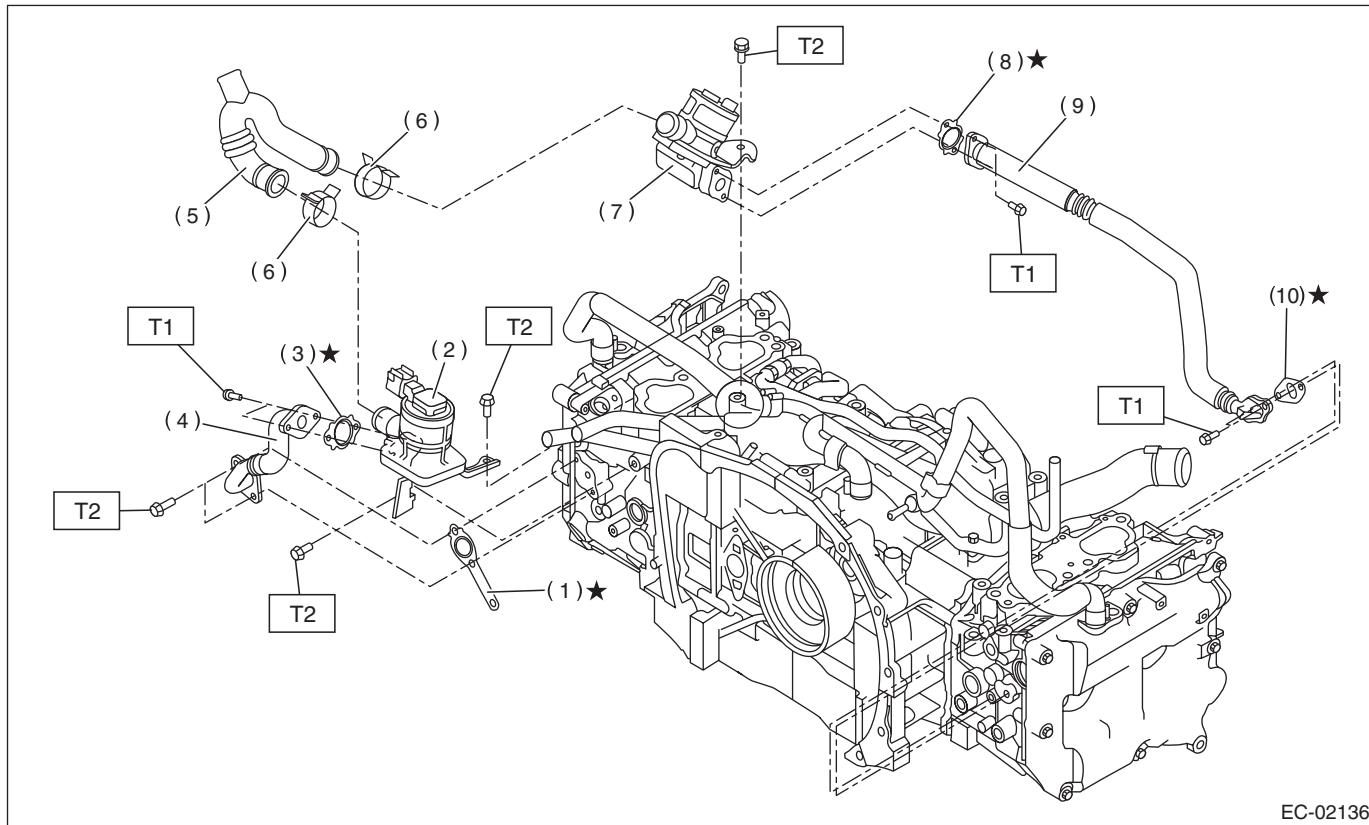

(1) Gasket	(6) Clamp
(2) Secondary air combination valve LH	(7) Secondary air combination valve RH
(3) Gasket	(8) Gasket
(4) Pipe LH	(9) Pipe RH
(5) Air duct	(10) Gasket

Tightening torque: N·m (kgf·m, ft·lb)

T1: 6.4 (0.65, 4.7)

T2: 19 (1.9, 13.7)

B: CAUTION


- Wear work clothing, including a cap, protective goggles and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Be careful not to burn yourself, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.

General Description

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

C: PREPARATION TOOL

1. SPECIAL TOOL

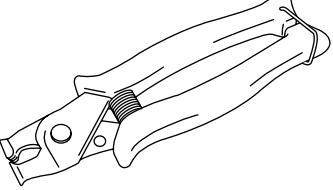ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18353AA000	18353AA000	CLAMP PLIERS	<ul style="list-style-type: none">Used for removing and installing the PCV hose.This is a general tool made by the French company CAILLAU. (code) 54.0.000.205 <p>To make this easier to obtain in the same way as genuine Subaru parts, it has been provided with a serial number as an ST.</p>