

17.PCV Hose Assembly

A: REMOVAL

CAUTION:

Do not remove if the PCV hose, diagnostics connector and PCV valve are not damaged.


1) Remove the intake manifold.

<Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>

2) Fit the depression in the ST with the protrusion on the clamp to unlock.

3) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

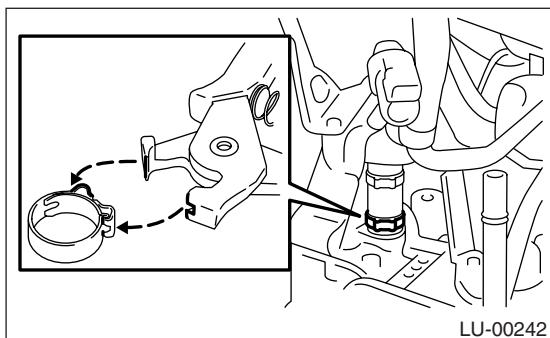


B: INSTALLATION

NOTE:

Replace the clamp with a new one.

1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

ST 18353AA000 CLAMP PLIERS

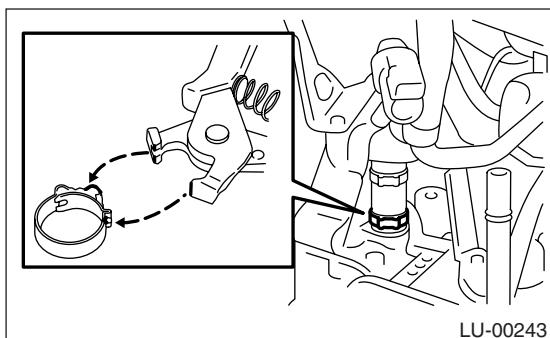

2) Install the intake manifold.

<Ref. to FU(H4DOTC)-17, INSTALLATION, Intake Manifold.>

PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

INTAKE (INDUCTION)

IN(H4DOTC)

	Page
1. General Description	2
2. Air Cleaner Case	7
3. Air Intake Duct	8
4. Intake Duct	9
5. Intercooler	10
6. Turbocharger	12
7. Air By-pass Valve	15
8. Resonator Chamber	16