


## 2. Front Catalytic Converter

### A: REMOVAL

- 1) Remove the center exhaust pipe. <Ref. to EX(H4DOTC)-7, REMOVAL, Center Exhaust Pipe.>
- 2) Disconnect the front catalytic converter (A) from the rear catalytic converter (B).

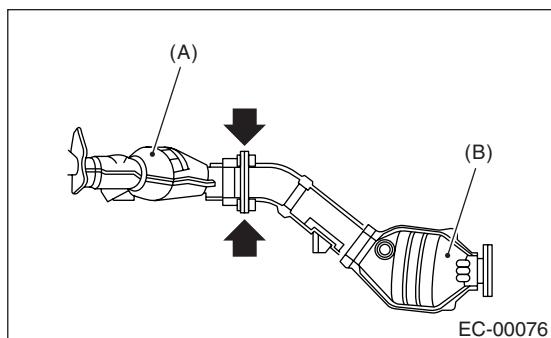

### B: INSTALLATION

#### NOTE:

- Always use new gasket.
- Install in the reverse order of removal.

### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.