


Rear Catalytic Converter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

3. Rear Catalytic Converter

A: REMOVAL

- 1) Remove the center exhaust pipe.
<Ref. to EX(H4DOTC)-7, REMOVAL, Center Exhaust Pipe.>
- 2) Disconnect the rear catalytic converter (B) from the front catalytic converter (A).

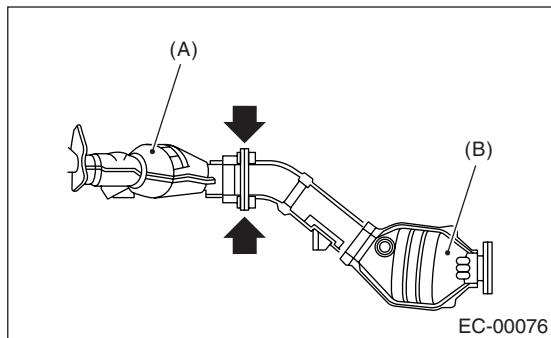

B: INSTALLATION

NOTE:

- Always use new gasket.
- Install in the reverse order of removal.

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.