

8. Fuel Level Sensor

A: REMOVAL

Refer to the FU(H4DOTC) section for removal procedure. <Ref. to FU(H4DOTC)-60, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

Refer to the FU(H4DOTC) section for installation procedure. <Ref. to FU(H4DOTC)-60, INSTALLATION, Fuel Level Sensor.>