

## 9. Fuel Temperature Sensor

### A: REMOVAL

The fuel temperature sensor and fuel level sensor are integrated into one unit; therefore, refer to “Fuel Level Sensor” for removal procedure. <Ref. to FU(H4DOTC)-60, REMOVAL, Fuel Level Sensor.>

### B: INSTALLATION

The fuel temperature sensor and fuel level sensor are integrated into one unit; therefore, refer to “Fuel Level Sensor” for installation procedure. <Ref. to FU(H4DOTC)-60, INSTALLATION, Fuel Level Sensor.>