

13. Clear Memory Mode

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select {Clear Memory} and press the [YES] key.
- 5) When the «Done» is shown on the display screen, turn the Subaru Select Monitor and ignition switch to OFF.

NOTE:

For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» display screen, select {DTC Clear} and press the [YES] key.
- 6) When the “Perform Diagnostic Code(s) Clear?” is shown on the screen, press the [YES] key.
- 7) Turn the ignition switch to OFF and then turn the Subaru Select Monitor switch to OFF.

NOTE:

For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

3. GENERAL SCAN TOOL

For procedures clearing memory using the general scan tool, refer to the general scan tool operation manual.