



14. Wastegate Control Solenoid Valve

A: REMOVAL


- 1) Disconnect the ground cable from battery.

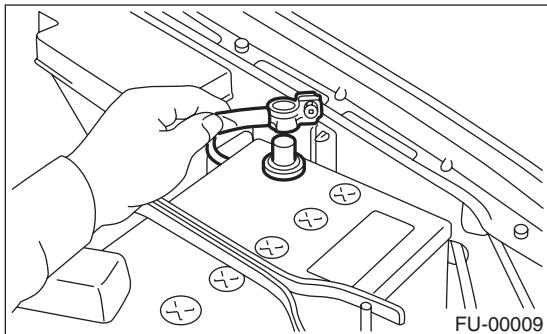

- 2) Disconnect the engine harness connector (A) from bracket.
- 3) Disconnect the connector (B) from wastegate control solenoid valve.
- 4) Remove the bracket from vehicle body.

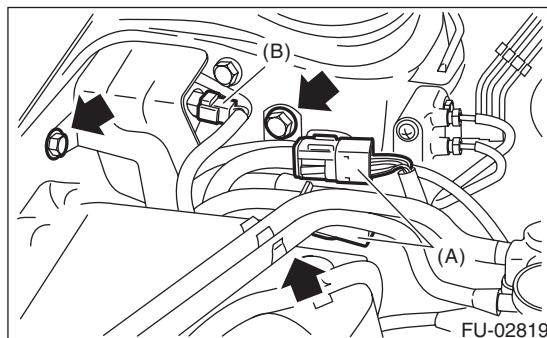

- 5) Disconnect the pressure hose (C) from the wastegate control solenoid valve.

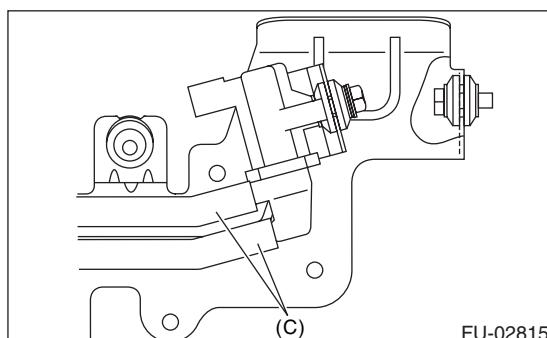

- 6) Remove the wastegate control solenoid valve from the bracket

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

$6.5 \text{ N}\cdot\text{m} (0.66 \text{ kgf}\cdot\text{m}, 4.8 \text{ ft-lb})$

