


### 27. Fuel Sub Level Sensor

#### A: REMOVAL


##### WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel.


1) Disconnect the ground cable from battery.

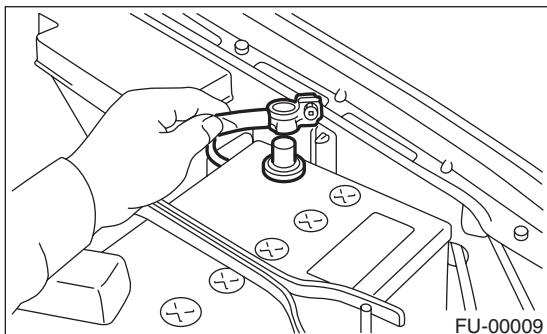


2) Lift-up the vehicle.  
 3) Drain fuel from fuel tank. <Ref. to FU(H4DOTC)-50, DRAINING FUEL, PROCEDURE, Fuel.>  
 4) Remove the luggage floor mat. <Ref. to EI-48, REMOVAL, Luggage Floor Mat.>  
 5) Remove the service hole cover.

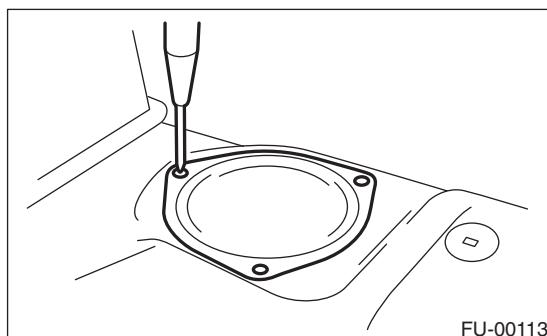


6) Disconnect the connector from fuel sub level sensor.  
 7) Disconnect the fuel jet pump hose.

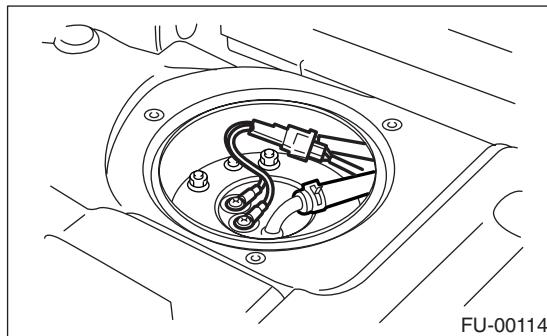

8) Remove the bolts which install fuel sub level sensor on fuel tank.

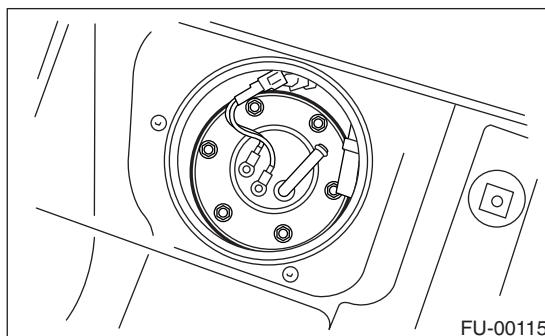

9) Remove the fuel sub level sensor.

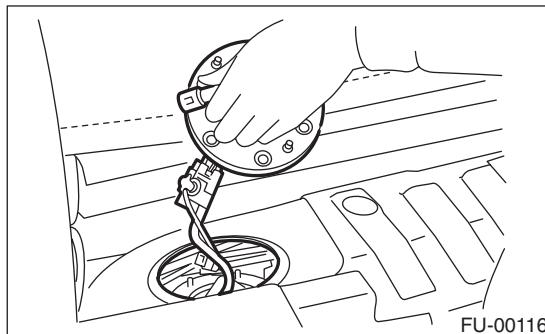

#### B: INSTALLATION

Install in the reverse order of removal.

##### NOTE:

Use a new gasket.

##### Tightening torque:

4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

