

28. Fuel Filter

A: REMOVAL

WARNING:

- Place "NO FIRE" signs near the working area.
- Be careful not to spill fuel.

NOTE:


The fuel filter is assembled in fuel pump assembly.

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-50, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Remove the fuel pump assembly.

<Ref. to FU(H4DOTC)-58, REMOVAL, Fuel Pump.>

3) Separate the fuel pump and fuel filter.

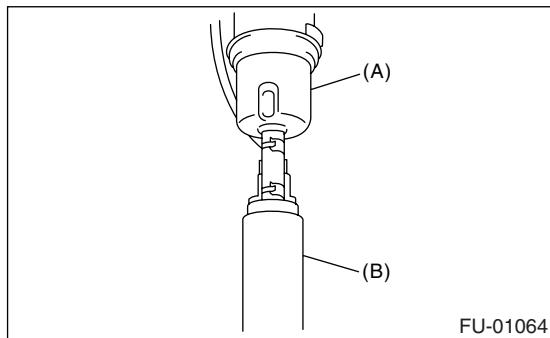


FU-01064

(A) Fuel filter

(B) Fuel pump

4) Rotate the filter holder in the direction of the arrow to remove the filter.

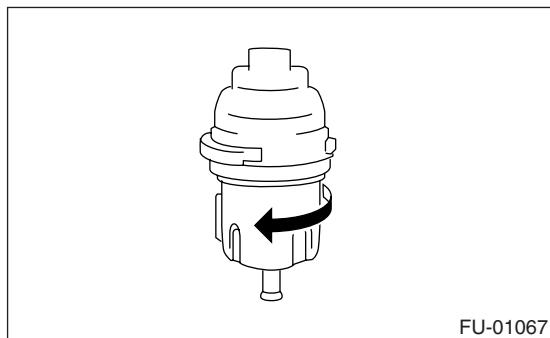

FU-01067

B: INSTALLATION

CAUTION:

- If the fuel hose is damaged at the connection, replace it with a new one.
- If the clamp is badly damaged, replace it with a new one.

Install in the reverse order of removal.

C: INSPECTION

1) Check the inside of fuel filter for dirt and water sediment.

2) If it is clogged, or if the replacement interval has been reached, replace it.