



29. Fuel Cut Valve

A: REMOVAL

- 1) Remove the fuel tank.
<Ref. to FU(H4DOTC)-51, REMOVAL, Fuel Tank.>
- 2) Remove the protect cover.

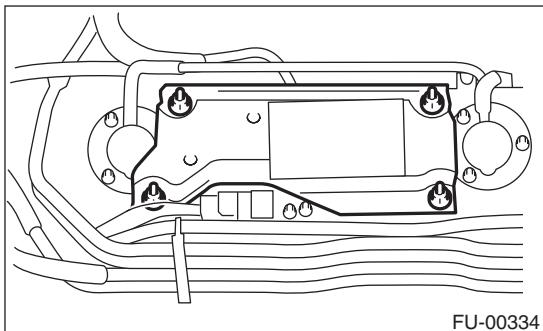

- 3) Loosen the clip and disconnect the evaporation hose from the fuel cut valve.

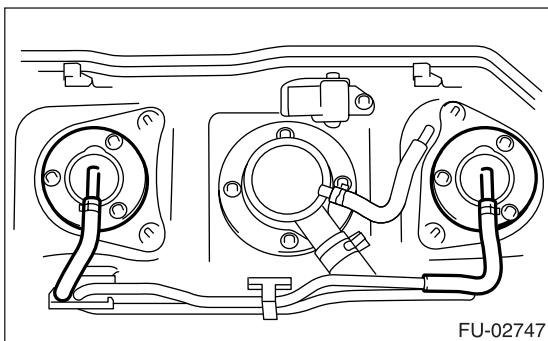

- 4) Remove the bolts which install the fuel cut valve.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft-lb)

