


3. Intake Manifold

A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-50, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Disconnect the ground cable from battery.

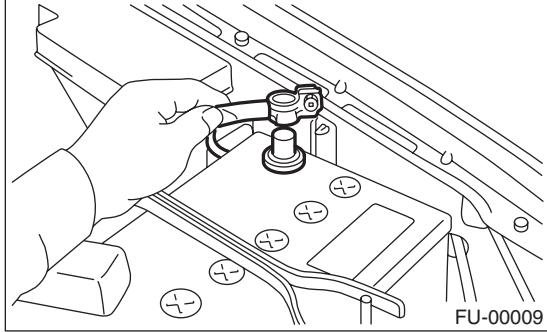


3) Open the fuel filler flap lid, and remove the fuel filler cap.

4) Remove the collector cover.

5) Lift-up the vehicle.

6) Remove the under cover.

7) Drain the coolant about 3.0 ℥ (3.2 US qt, 2.6 Imp qt).

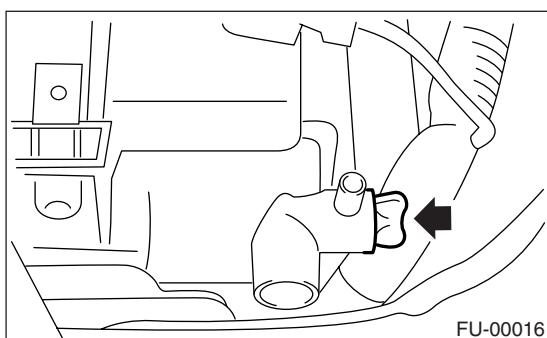

8) Remove the air cleaner upper cover and air intake boot. <Ref. to IN(H4DOTC)-7, REMOVAL, Air Cleaner Case.>

9) Remove the air cleaner element.

10) Remove the intercooler. <Ref. to IN(H4DOTC)-10, REMOVAL, Intercooler.>


11) Remove the coolant filler tank.

<Ref. to CO(H4SO)-41, REMOVAL, Coolant Filler Tank.>

12) Remove the power steering pump.

(1) Remove the front side of the V-belts. <Ref. to ME(H4DOTC)-38, REMOVAL, V-belt.>


(2) Disconnect the power steering switch connector.

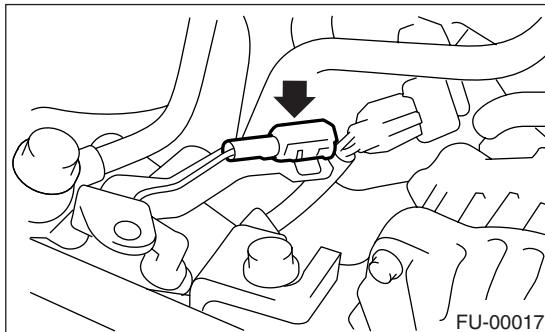


(3) Remove the bolts which install the power steering pipe bracket to the intake manifold.

NOTE:


Do not disconnect the power steering hose.

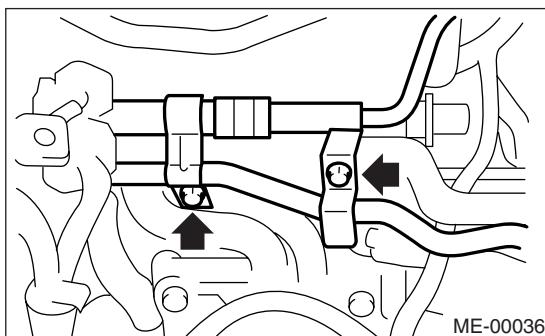

(4) Remove the bolts, which install power steering pump bracket.

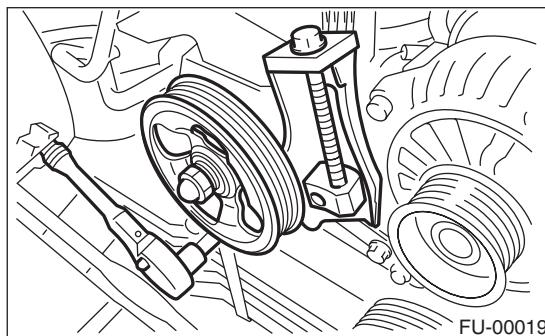


(5) Remove the reservoir tank from the bracket by pulling it upward.

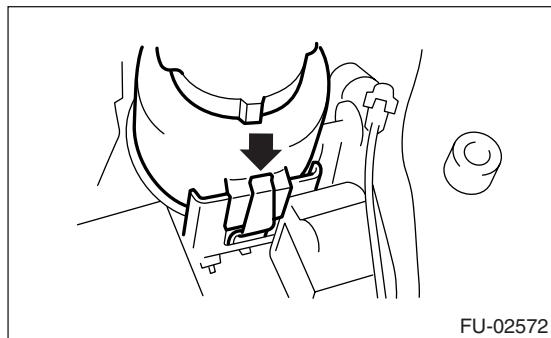


FU-02572

15) Disconnect the brake booster hose.

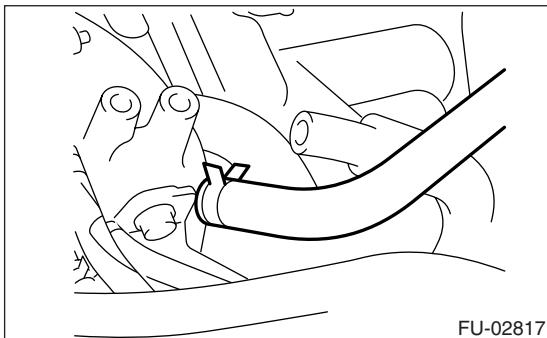


FU-02817

(6) Place the power steering pump on the right side wheel apron.

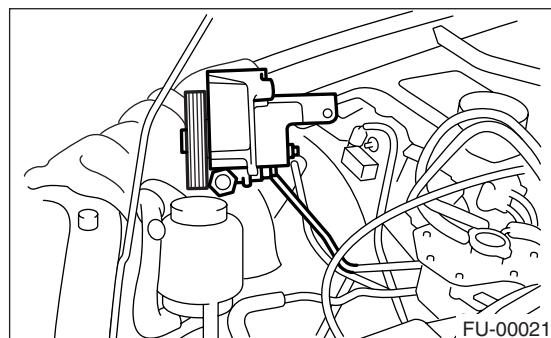


FU-00021

13) Disconnect the emission hose (A) and the connector (B) from the PCV hose assembly.

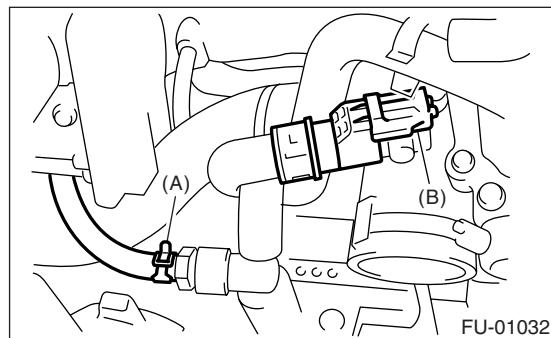


FU-01032

14) Disconnect the engine coolant hose from throttle body.

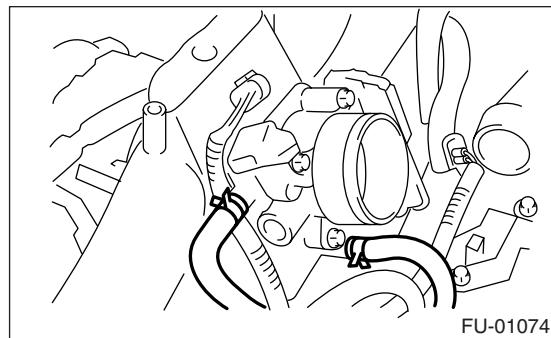


FU-01074

16) Disconnect the pressure hose from the intake duct.

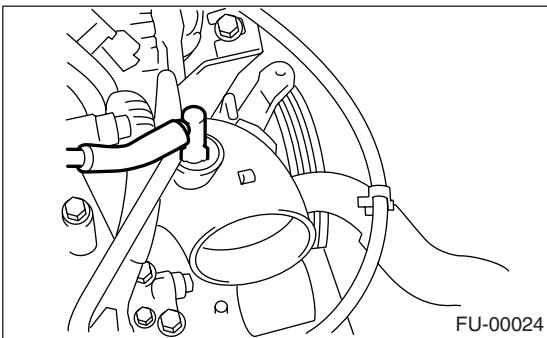


FU-00024

17) Disconnect the engine harness connectors from the bulk head harness connector.

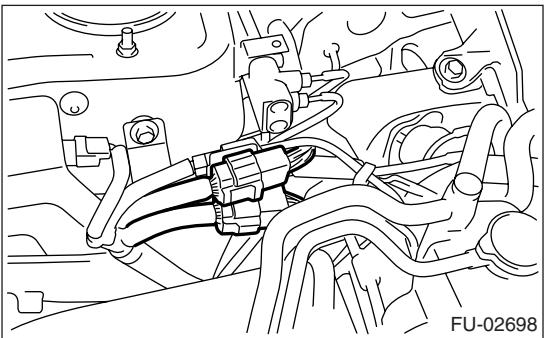

FU-02698

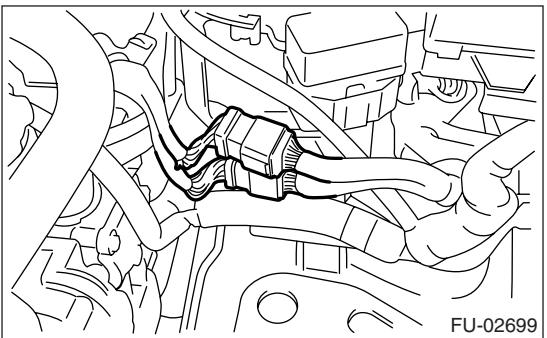


FU-02699


Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)


18) Disconnect the connectors from the engine coolant temperature sensor (A), oil pressure switch (B) and crankshaft position sensor (C).

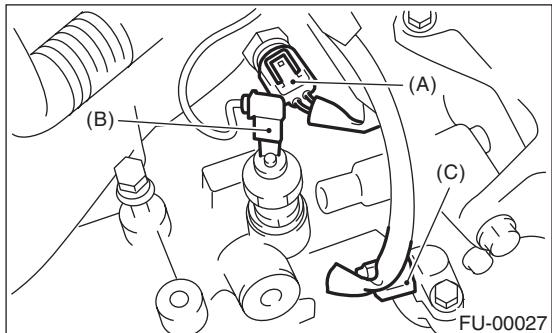

19) Disconnect the knock sensor connector.

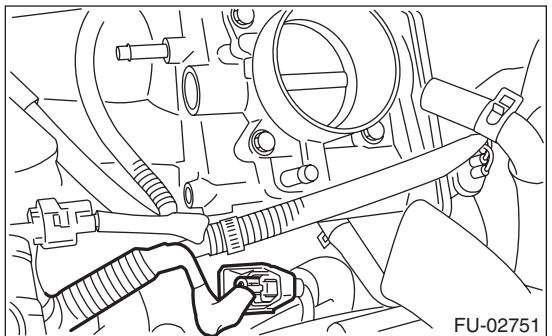


20) Disconnect the connector from camshaft position sensor.

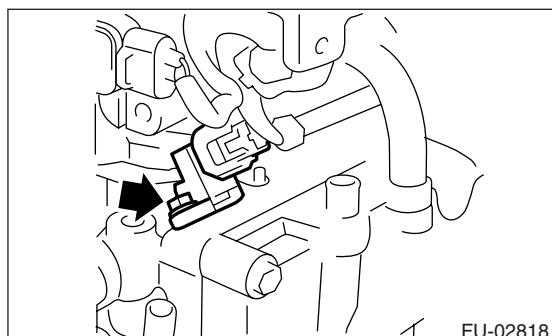


21) Disconnect the connector from ignition coil.

- RH side

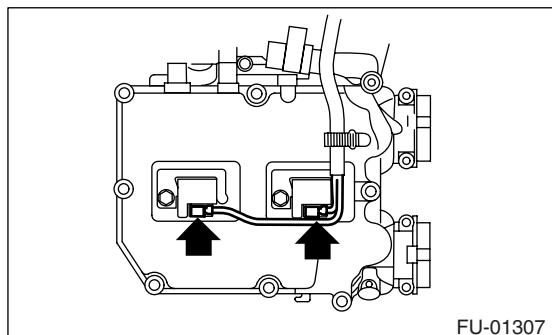


- LH side

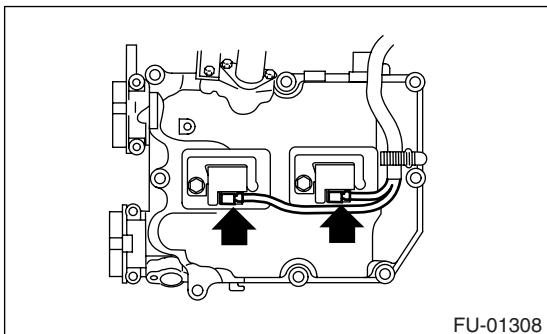


22) Disconnect the engine harness fixed by clip (A) from the bracket.

- RH side

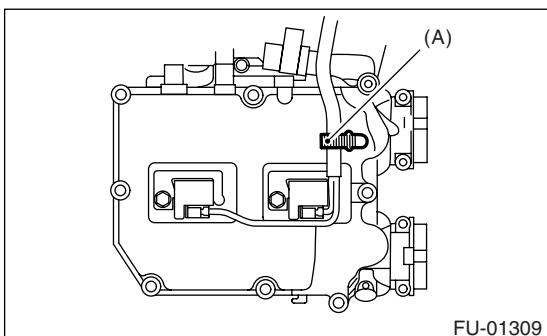

- LH side

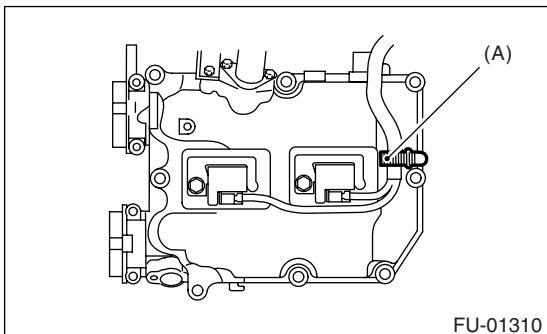


23) Using the ST to disconnect the fuel hose from each fuel pipe. <Ref. to FU(H4DOTC)-65, REMOV-AL, Fuel Delivery, Return and Evaporation Lines.>

CAUTION:


- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

ST 42099AE000 CONNECTOR REMOVER

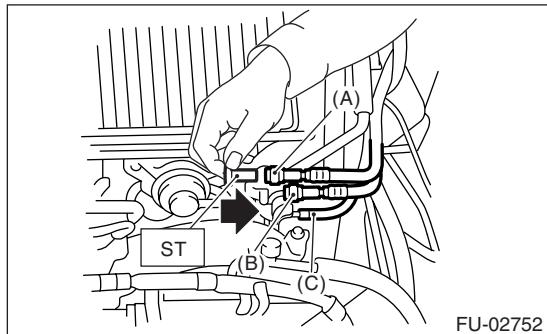

(A) Fuel delivery hose
 (B) Return hose
 (C) Evaporation hose

24) Remove the bolts which hold intake manifold onto the cylinder heads.

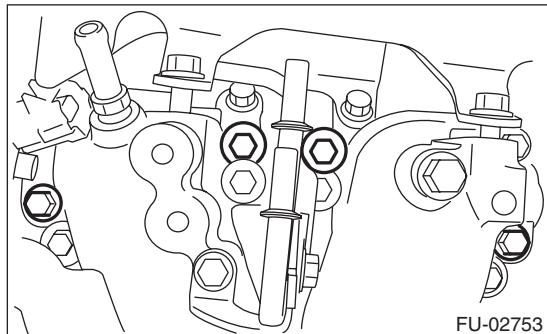

25) Remove the intake manifold.

B: INSTALLATION


1) Install the intake manifold onto cylinder heads.

NOTE:


Replace with a new gasket.

Tightening torque:


25 N·m (2.5 kgf·m, 18.1 ft-lb)

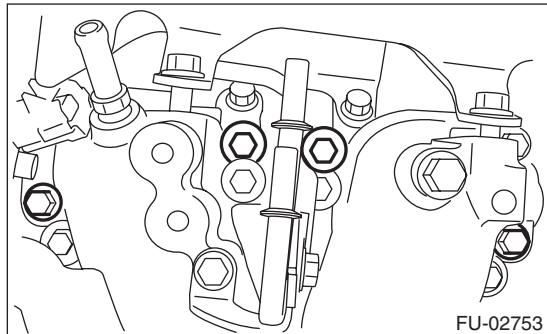


2) Connect the fuel delivery hose, return hose, and evaporation hose.

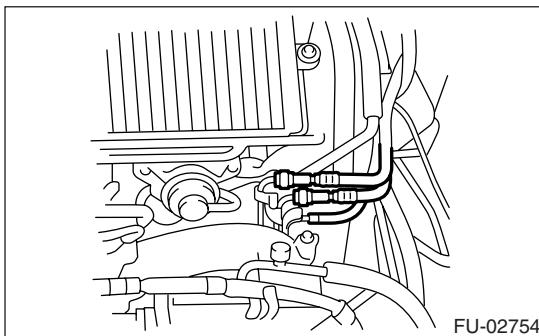


3) Connect the connector to the engine coolant temperature sensor (A), oil pressure switch (B) and crankshaft position sensor (C).

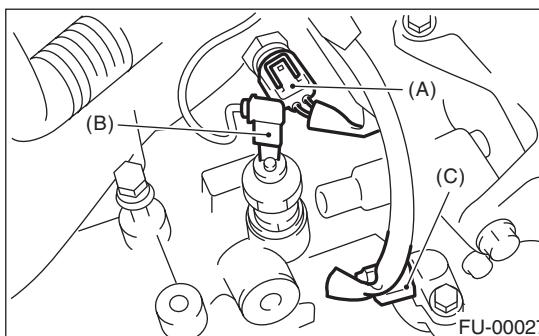

4) Connect the connector to the knock sensor.

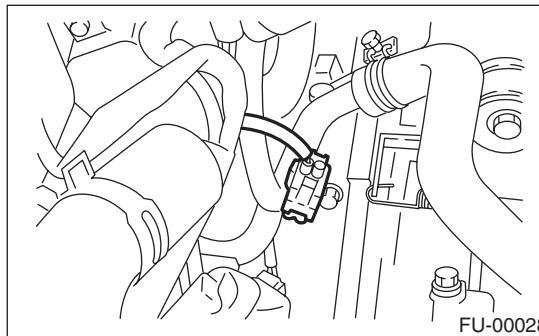


5) Connect the connectors to camshaft position sensor.

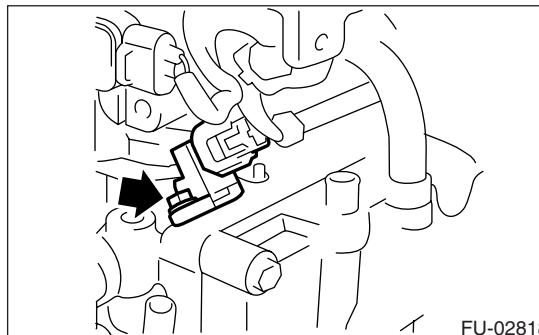


Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)

6) Connect the connector to the ignition coil.

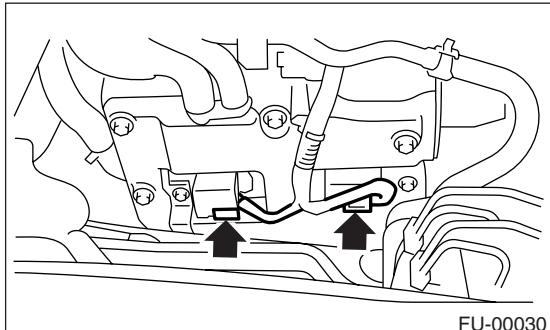


8) Connect the engine harness connectors to bulk-head harness connectors.

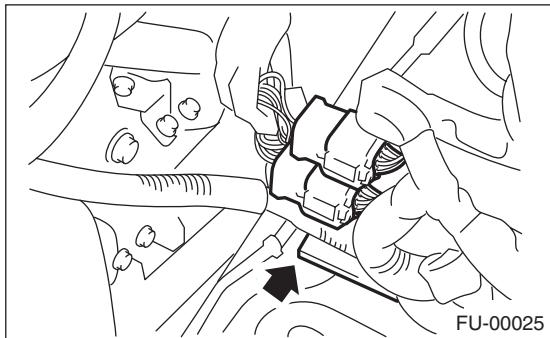


7) Connect the engine harness with clip (A) to the bracket.


- RH side

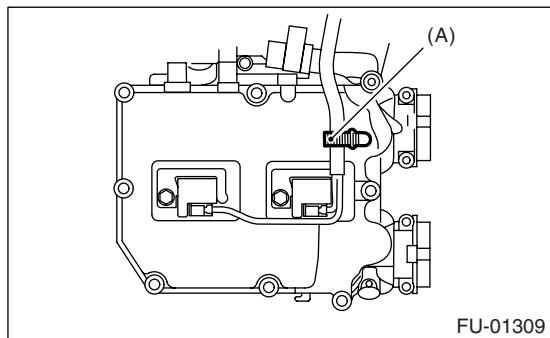


- LH side

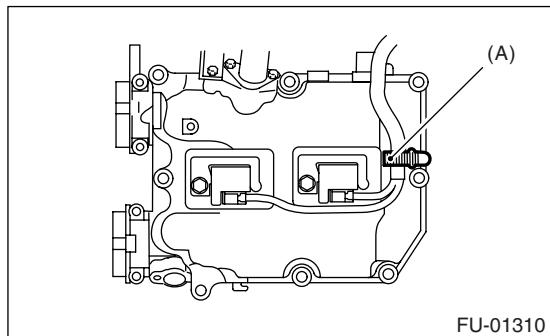


9) Connect the brake booster vacuum hose.

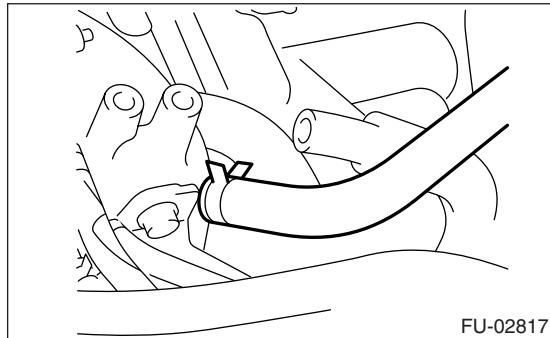


10) Connect the engine coolant hoses to throttle body.

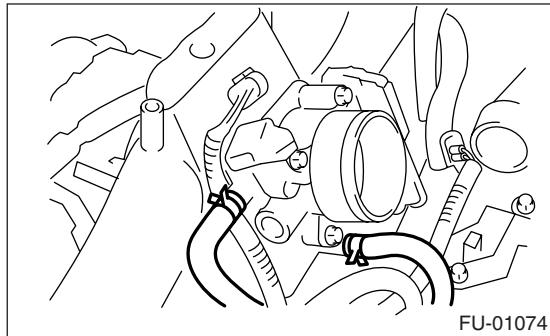

11) Connect the emission hose (A) and the connector (B) to the PCV hose assembly.

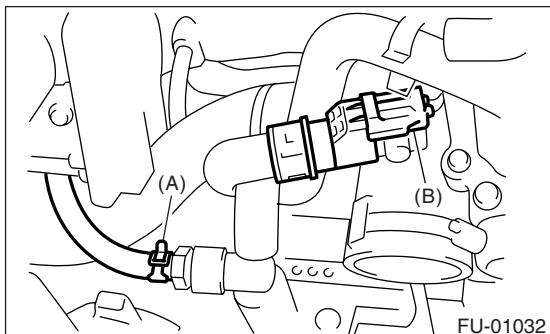


12) Connect the pressure hose to the intake duct.

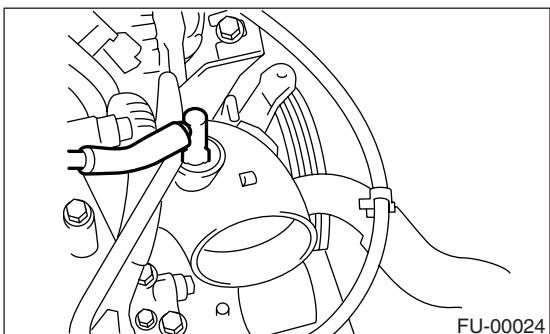


13) Install the power steering pump.

(1) Install the reservoir tank to the bracket.

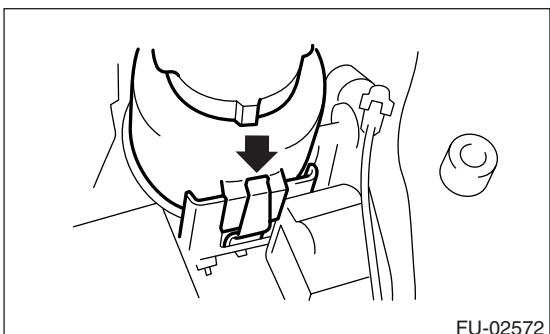


(2) Connect the connector to power steering pump switch.

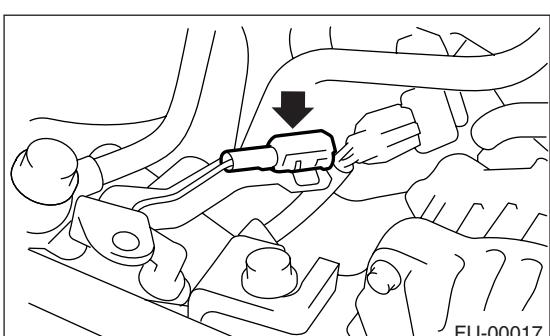


(3) Install the power steering pump, and tighten the bolts.

Tightening torque:
22 N·m (2.2 kgf·m, 15.9 ft-lb)

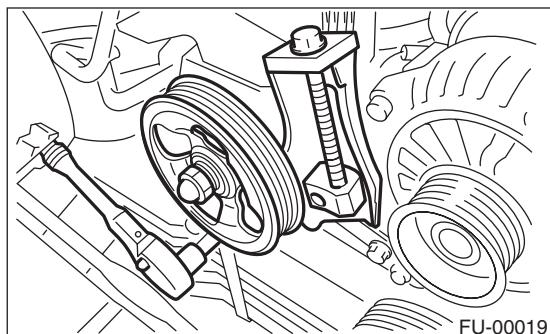

(4) Install the power steering pipe bracket onto the right side intake manifold.

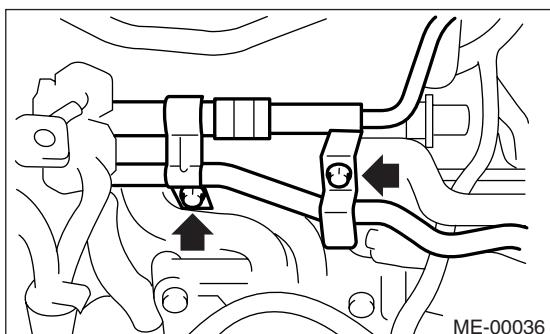

(5) Install the front side V-belts. <Ref. to ME(H4DOTC)-38, INSTALLATION, V-belt.>


14) Install the coolant filler tank.
<Ref. to CO(H4SO)-41, INSTALLATION, Coolant Filler Tank.>

15) Install the intercooler. <Ref. to IN(H4DOTC)-10, INSTALLATION, Intercooler.>

16) Install the air cleaner element.

17) Install the air cleaner upper cover and air intake duct as a unit. <Ref. to IN(H4DOTC)-7, INSTALLATION, Air Cleaner Case.>

18) Connect the connector to fuel pump relay.

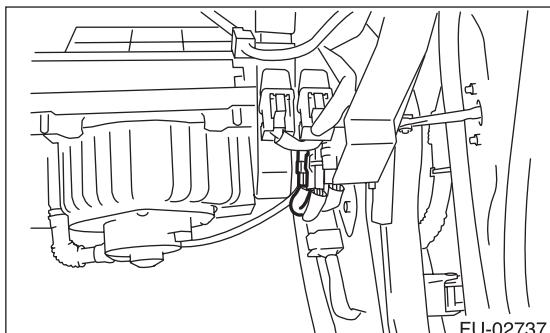

19) Install the collector cover.

20) Connect the ground cable to battery.

21) Lift-up the vehicle.

22) Install the under cover.

Intake Manifold


FUEL INJECTION (FUEL SYSTEMS)

23) Fill engine coolant.


<Ref. to CO(H4SO)-16, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

C: DISASSEMBLY



1) Remove the fuel pipe protector RH.

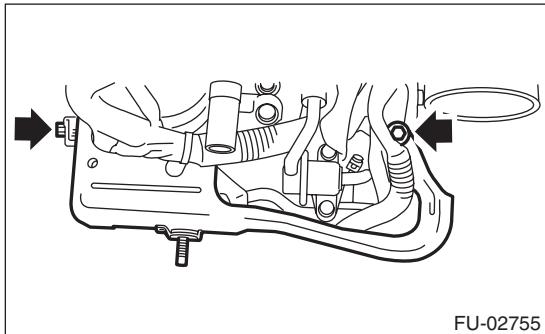


2) Remove the fuel pipe protector LH.

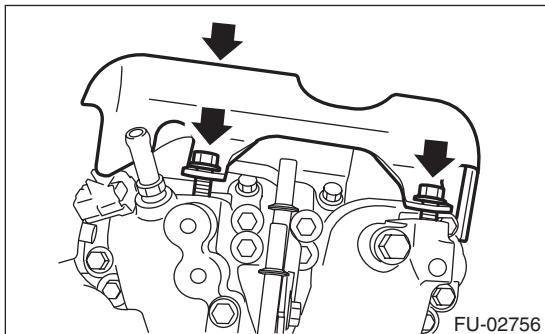


3) Remove the engine ground terminal from the intake manifold.

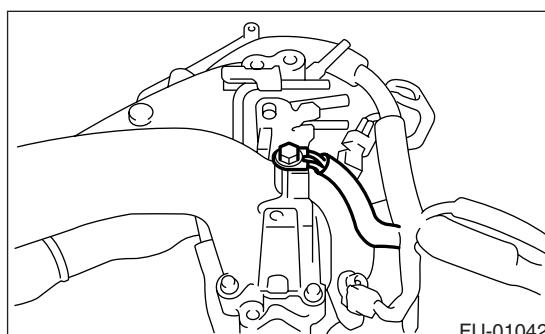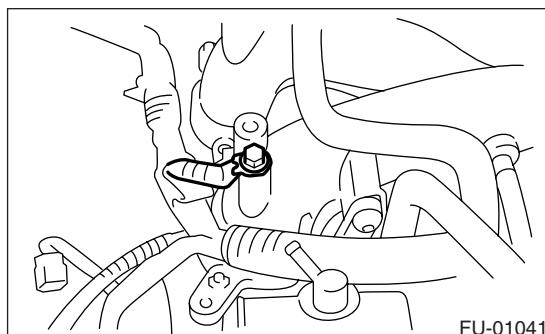


4) Disconnect the connector from the throttle position sensor (A), and the manifold pressure sensor (B).

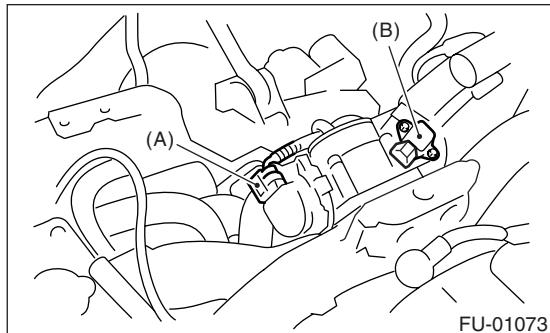


5) Remove the throttle body to intake manifold.

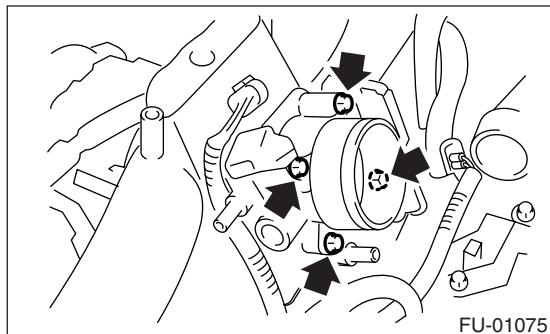

6) Disconnect the connector from fuel injector.

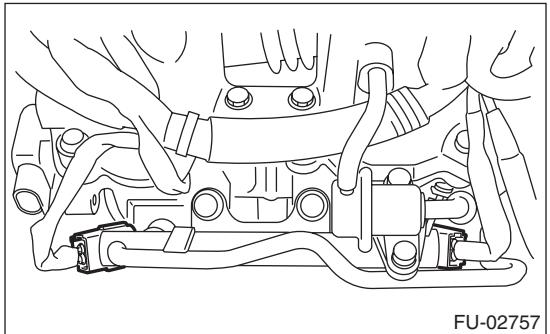


7) Disconnect the connector from tumble generator valve actuator.

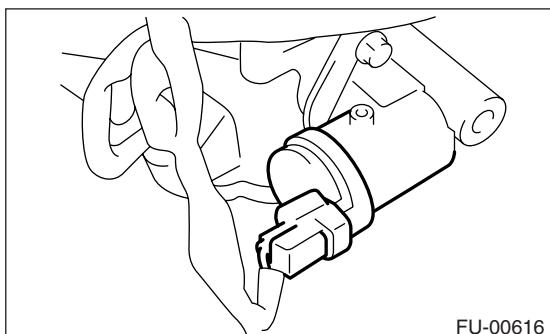

Intake Manifold


FUEL INJECTION (FUEL SYSTEMS)

8) Disconnect the connector from tumble generator valve sensor.

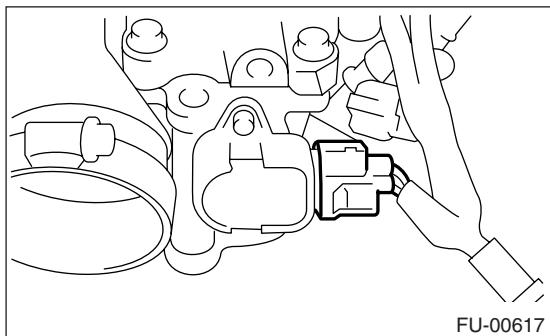


9) Disconnect the connector from purge control solenoid valve.


10) Remove the purge control solenoid valve.

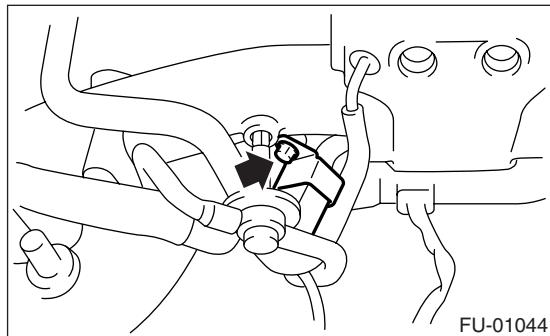

11) Disconnect the evaporation hose and purge valve from the intake manifold.


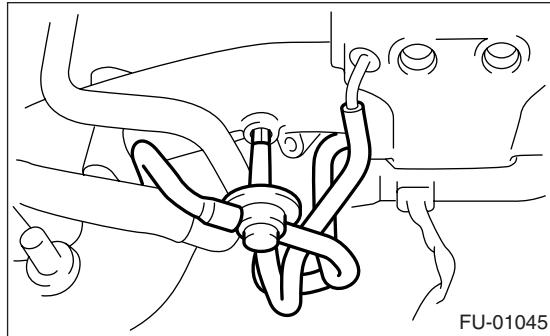


12) Remove the two bolts which hold fuel pipes on the left side of intake manifold.


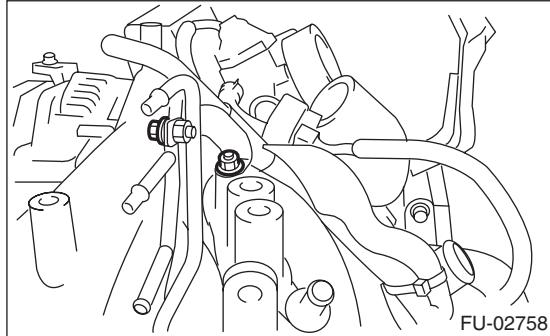


13) Remove the bolt which holds fuel injector pipe onto intake manifold.

• LH side

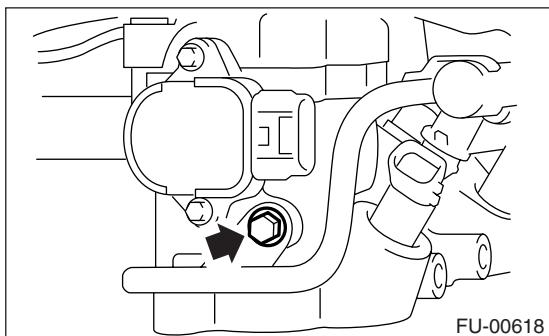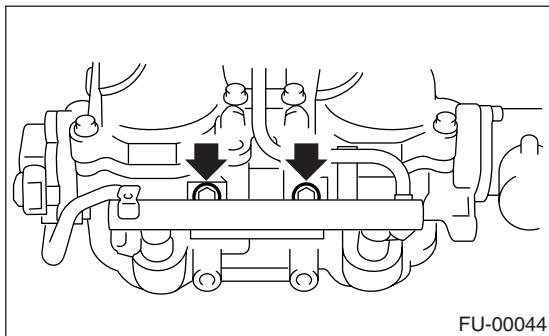


• RH side

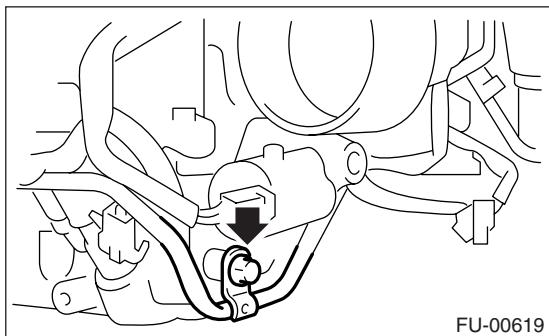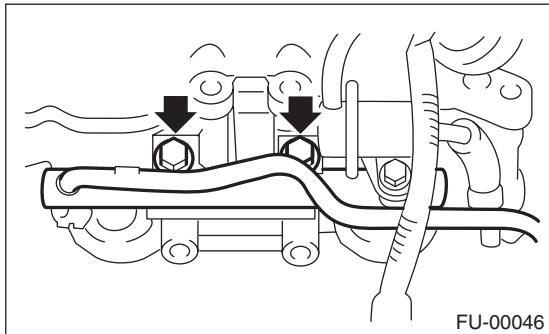


Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)

14) Remove the fuel injector.

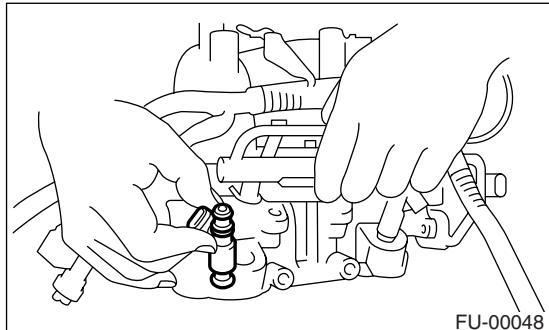


15) Remove the harness bracket which holds the engine harness onto intake manifold.

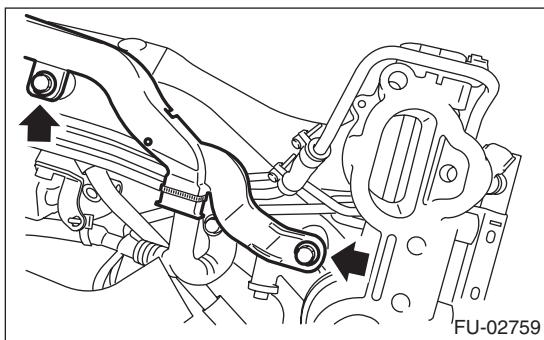


16) Remove the engine harness from intake manifold.


17) Loosen the clamp which holds the front LH side fuel hose to injector pipe to remove the pipe from clamp.

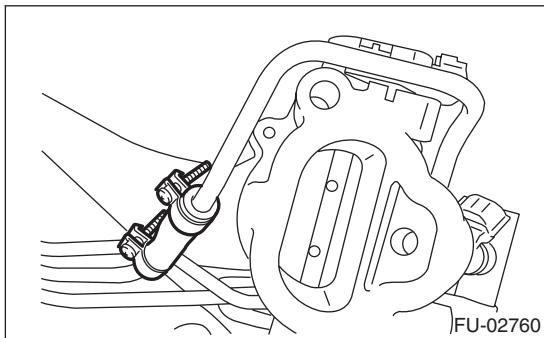

18) Loosen the clamp which holds the RH side fuel hose to injector pipe to remove the pipe from clamp.

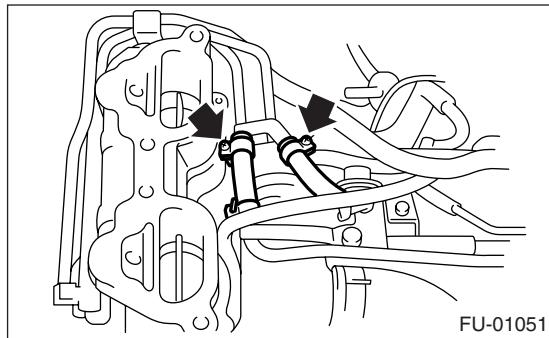


19) Remove the bolts which install fuel pipes on intake manifold.

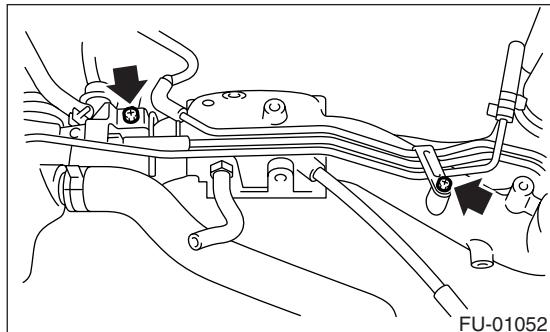


20) Remove the fuel pipe assembly and pressure regulator from intake manifold.

21) Remove the intake duct from intake manifold.

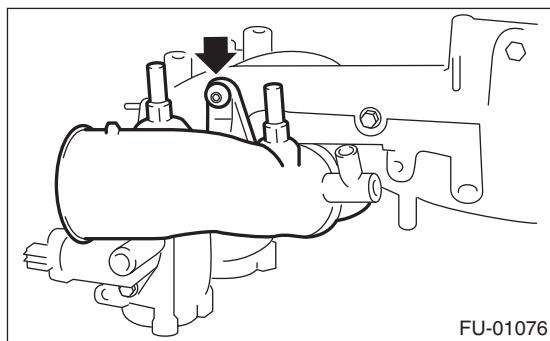

22) Remove the tumble generator assembly from intake manifold.

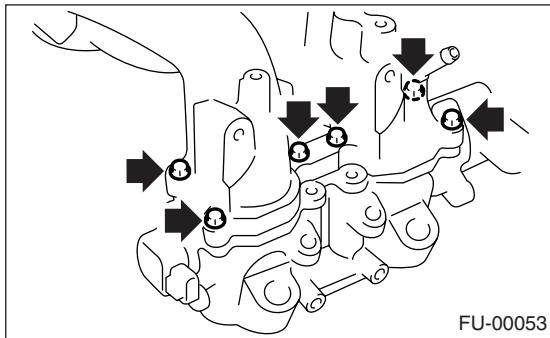

D: ASSEMBLY


NOTE:

Replace with a new gasket.

1) Install the tumble generator valve assembly onto intake manifold.

Tightening torque:


8.25 N·m (0.84 kgf-m, 6.1 ft-lb)

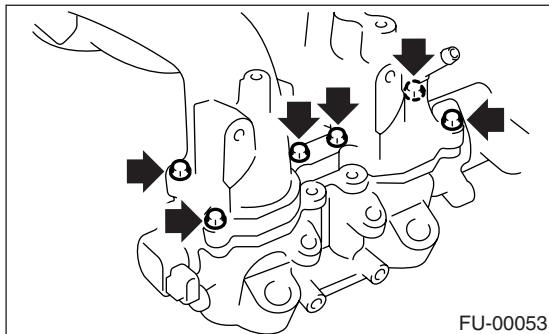

2) Install the air intake duct to the intake manifold.

Tightening torque:


19 N·m (1.9 kgf-m, 14.0 ft-lb)

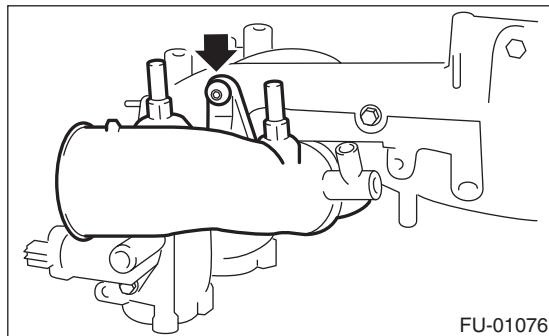

3) Install the fuel pipe assembly and pressure regulator to intake manifold.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

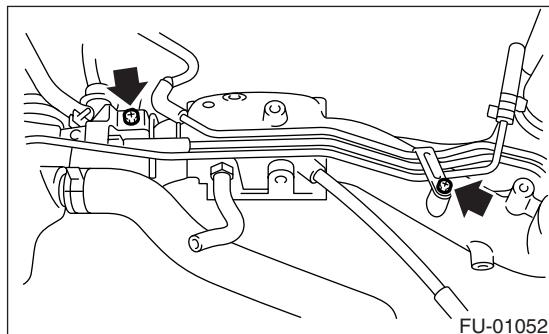


4) Install the fuel injector pipe LH.

5) Connect the left side fuel hose LH to the injector pipe, and tighten the clamp screw.

Tightening torque:

1.25 N·m (0.13 kgf-m, 0.94 ft-lb)

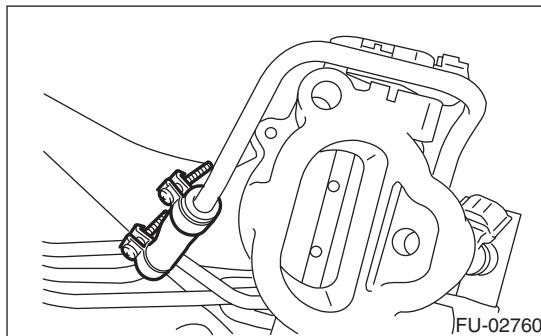


6) Install the fuel injector pipe RH.

7) Connect the fuel hose RH to the injector pipe, and tighten the clamp screw.

Tightening torque:

1.25 N·m (0.13 kgf-m, 0.94 ft-lb)

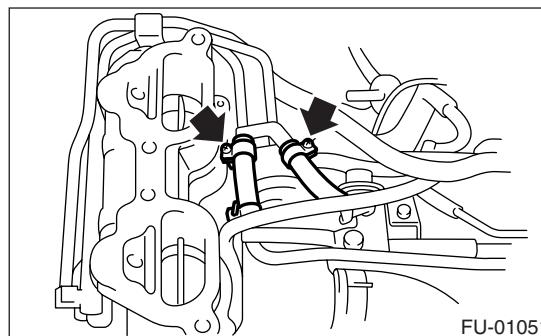


8) Install the engine harness onto intake manifold.

9) Install the harness bracket which holds the engine harness onto intake manifold.

Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)

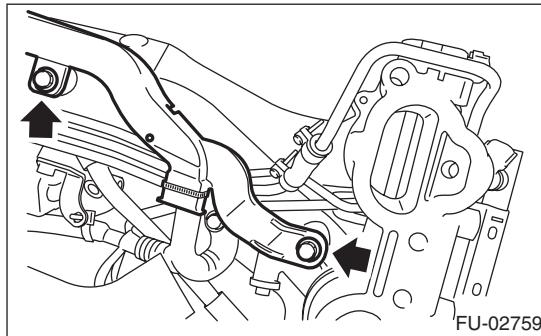

Intake Manifold



FUEL INJECTION (FUEL SYSTEMS)

10) Tighten the bolts which secure fuel injector pipe onto intake manifold.



Tightening torque:

19 N·m (1.9 kgf·m, 14.0 ft-lb)

- LH side

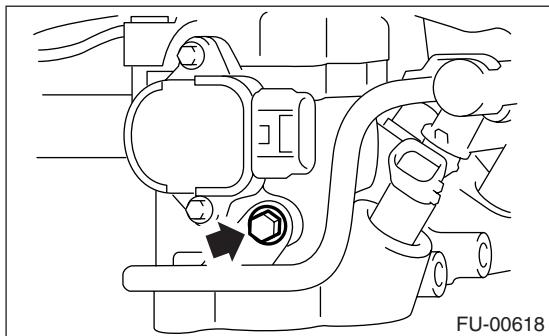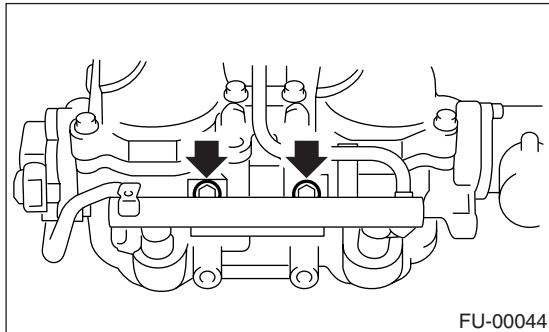


- RH side

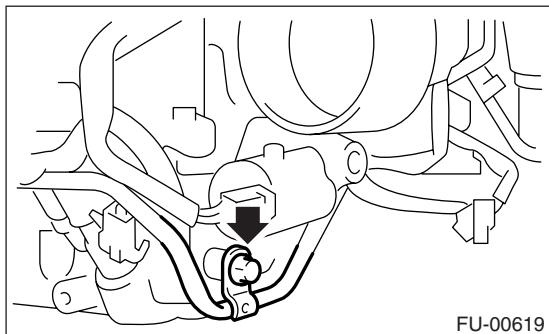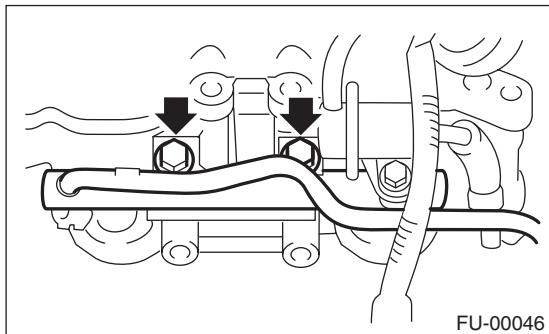

11) Tighten the two bolts which install the fuel pipe on the left side of intake manifold.

Tightening torque:


6.4 N·m (0.65 kgf·m, 4.7 ft-lb)

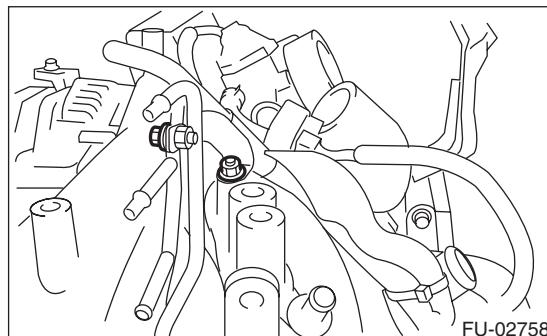

12) Connect the evaporation hose to the purge valve.


NOTE:

Connect the evaporation hose as shown in the figure.

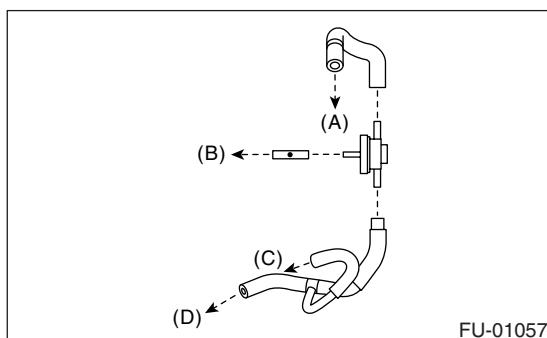

- (A) To intake duct
- (B) To intake manifold
- (C) To purge control solenoid valve
- (D) To fuel pipe ASSY


13) Connect the evaporation hose and purge valve to the intake manifold.

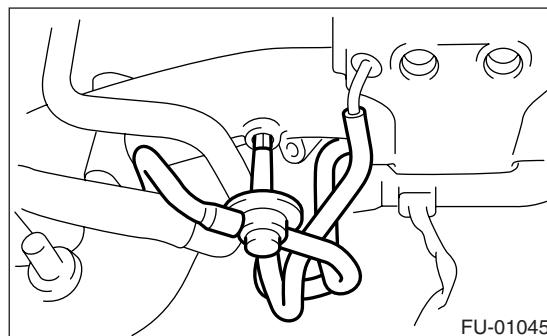

14) Install the purge control solenoid valve.

Tightening torque:


19 N·m (1.9 kgf·m, 14.0 ft-lb)

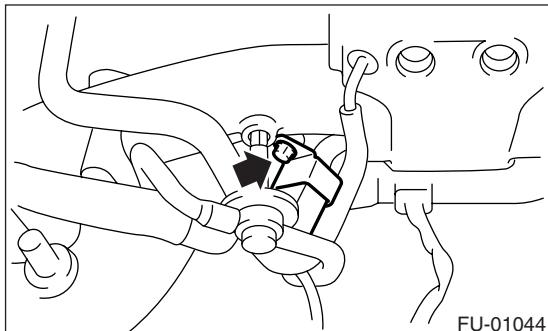

15) Connect the hose to the purge control solenoid valve.

NOTE:

Connect the evaporation hose as shown in the figure.

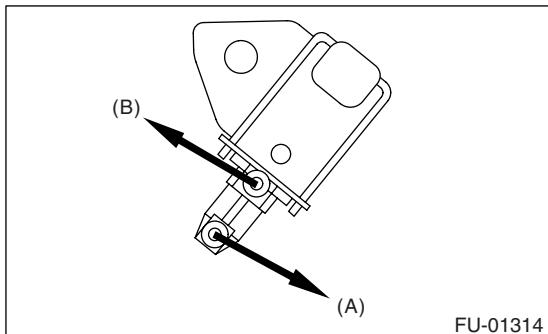


(A) To purge value


(B) To intake manifold

16) Connect the connector to the purge control solenoid valve.


17) Connect the connector to the tumble generator valve sensor.

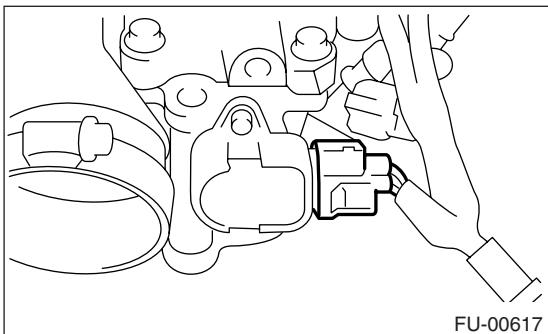

18) Connect the connector to the tumble generator valve actuator.

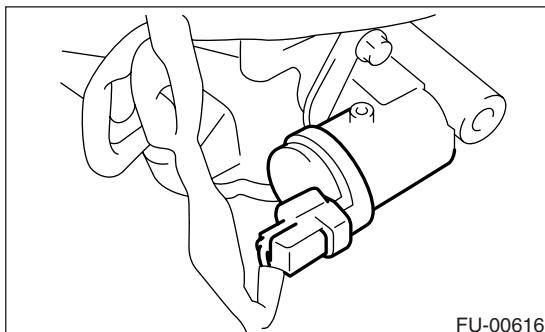

19) Connect the connector to the fuel injector.

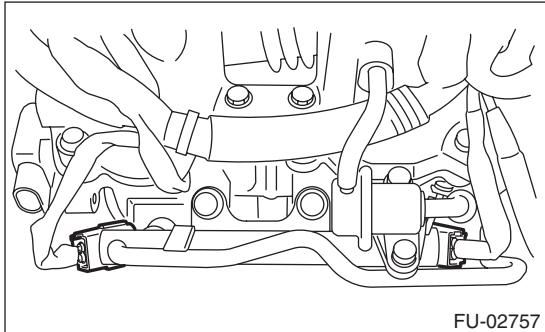


20) Install the throttle body to intake manifold.

NOTE:


Replace with a new gasket.

Tightening torque:

8 N·m (0.8 kgf·m, 5.8 ft-lb)

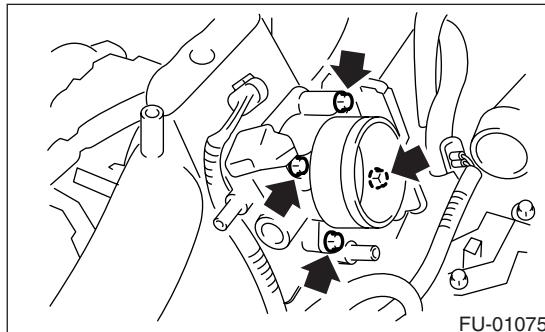

21) Connect the connector to the throttle position sensor (A), and the manifold pressure sensor (B).

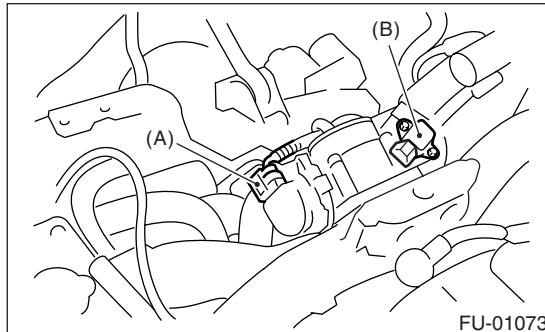



Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)

22) Install the engine ground terminal to the intake manifold.

Tightening torque:


19 N·m (1.9 kgf·m, 14.0 ft-lb)

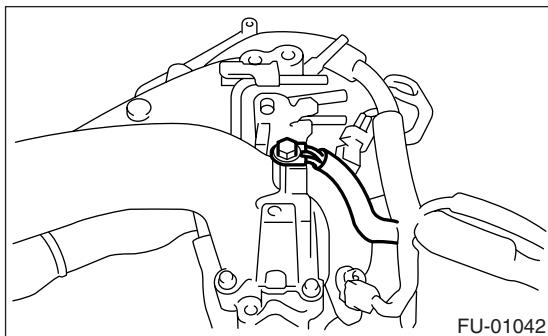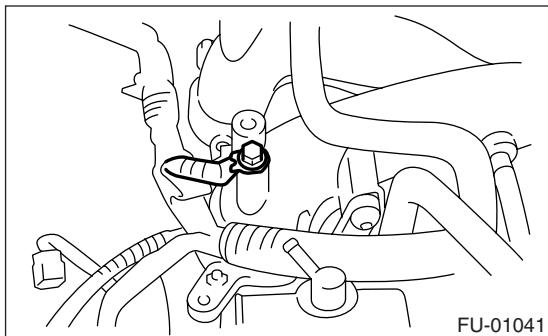

23) Install the fuel pipe protector RH.

Tightening torque:


19 N·m (1.9 kgf·m, 14.0 ft-lb)

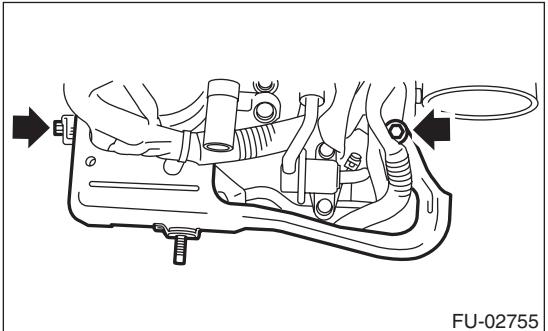

24) Install the fuel pipe protector LH.

Tightening torque:

19 N·m (1.9 kgf·m, 14.0 ft-lb)

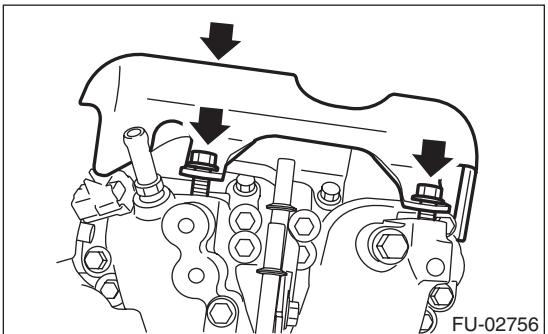

E: INSPECTION

Make sure that the fuel pipe and fuel hose are not cracked and those connections are tight.