


## 5. Spark Plug

### A: REPLACEMENT

- 1) Remove the intake duct and intake chamber.
- 2) Remove the washer tank and set to the side.
- 3) Disconnect the spark plug cord.
- 4) Remove the spark plug with a plug-wrench.

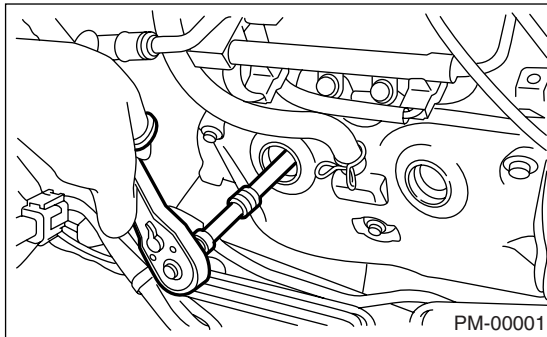

- 5) Install a new spark plug.

#### **Spark plug:**

**Non-turbo model**

**NGK: FR5AP-11**

**Turbo model:**

**NGK: ILFR6B**

#### **Spark plug gap:**

**Non-turbo model**

**1.0 — 1.1 mm (0.039 — 0.043 in)**

**Turbo model**

**0.7 — 0.8 mm (0.028 — 0.031 in)**

- 6) Tighten the spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

#### **Tightening torque:**

**21 N·m (2.14 kgf·m, 15.49 ft·lb)**

#### **NOTE:**

- Be sure to place the gasket between the cylinder head and spark plug.
- If the torque wrench is not available, tighten the spark plug until gasket contacts cylinder head; then tighten further 1/4 to 1/2 turns.