

## 9. Fuel Filter

### A: REPLACEMENT

For fuel filter replacement procedure, refer to FU section.

<Ref. to FU(H4SO)-56, Fuel Filter.>

### B: INSPECTION

1) If the filter is clogged, or if the replacement interval has been reached, replace it.