

### 11.Extension Case Oil Seal

#### A: INSPECTION

Make sure that the ATF is not leaking from the transmission and propeller shaft joint. If there is leakage, replace the oil sea and check the propeller shaft. <Ref. to 4AT-46, REPLACEMENT, Extension Case Oil Seal.>

#### B: REPLACEMENT


- 1) Clean the transmission exterior.
- 2) Drain the ATF completely.

#### NOTE:

Tighten the drain plug (ATF) after draining the ATF.

#### *Tightening torque:*

**25 N·m (2.5 kgf-m, 18.1 ft-lb)**

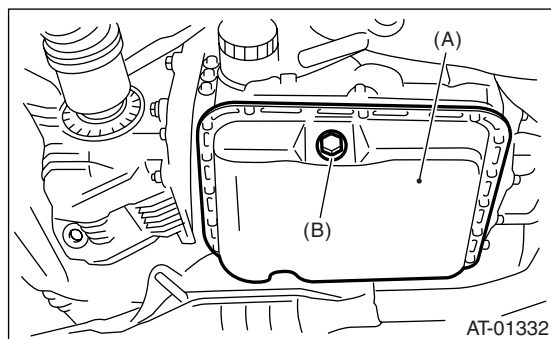

- (A) Oil pan  
(B) Drain plug (ATF)

- 3) Remove the rear exhaust pipe and muffler.  
(Non-turbo model)  
<Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-9, REMOVAL, Muffler.>  
(Turbo model)  
<Ref. to EX(H4DOTC)-12, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H4DOTC)-14, REMOVAL, Muffler.>
- 4) Remove the heat shield cover. (If equipped)
- 5) Remove the propeller shaft. <Ref. to DS-12, REMOVAL, Propeller Shaft.>
- 6) Using the ST, remove the oil seal.  
ST 398527700 PULLER ASSY
- 7) Using the ST, install the oil seal.  
ST 498057300 INSTALLER
- 8) Install the propeller shaft. <Ref. to DS-13, INSTALLATION, Propeller Shaft.>
- 9) Install the heat shield cover. (If equipped)

- 10) Install the rear exhaust pipe and muffler.  
(Non-turbo model)

<Ref. to EX(H4SO)-8, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-9, INSTALLATION, Muffler.>

(Turbo model)

<Ref. to EX(H4DOTC)-12, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H4DOTC)-14, INSTALLATION, Muffler.>

- 11) Pour in ATF. <Ref. to 4AT-28, Automatic Transmission Fluid.>

- 12) Bleed the air of control valve. <Ref. to 4AT-62, Air Bleeding of Control Valve.>

- 13) Check the level and leaks of the ATF. <Ref. to 4AT-28, Automatic Transmission Fluid.>