

Differential Side Retainer Oil Seal

MANUAL TRANSMISSION AND DIFFERENTIAL


6. Differential Side Retainer Oil Seal

A: INSPECTION

Check for leakage of gear oil from the differential side retainer oil seal. If there is an oil leak, replace the oil seal.

B: REPLACEMENT

- 1) Lift-up the vehicle.
- 2) Drain the differential gear oil from the differential oil drain plug.

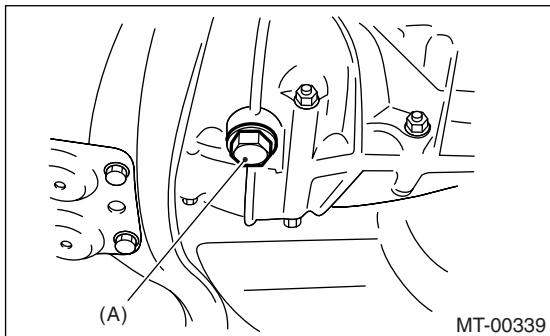


(A) Drain plug

- 3) Replace the gasket with a new one and tighten the differential oil drain plug.

Tightening torque:

44 N·m (4.5 kgf-m, 32.5 ft-lb) (Aluminum gasket)

70 N·m (7.1 kgf-m, 51.6 ft-lb) (Copper gasket)

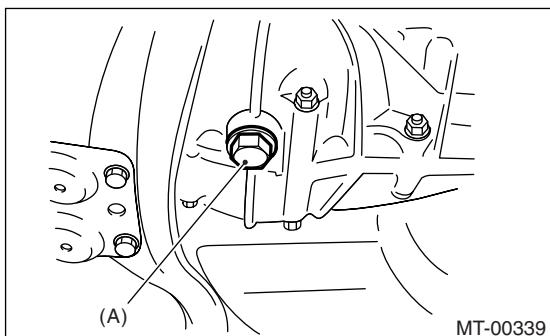

(A) Drain plug

- 4) Remove the front and center exhaust pipes. (Non-turbo model) <Ref. to EX(H4SO)-4, REMOVAL, Front Exhaust Pipe.>


- 5) Separate the front drive shaft from the transmission. <Ref. to DS-30, REMOVAL, Front Drive Shaft.>

- 6) Remove the differential side retainer oil seal using a screw driver wrapped with vinyl tape etc.

- 7) Using the ST, install the differential side retainer oil seal by lightly tapping with a hammer.
ST 18675AA000 DIFFERENTIAL SIDE OIL SEAL INSTALLER

NOTE:

Apply oil to the oil seal lips.

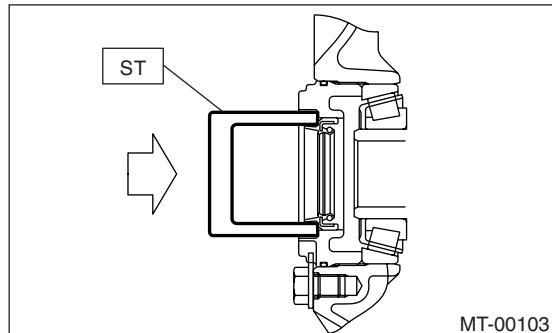

- 8) Install the front drive shaft. <Ref. to DS-31, INSTALLATION, Front Drive Shaft.>
- 9) Install the front and center exhaust pipe. (Non-turbo model) <Ref. to EX(H4SO)-5, INSTALLATION, Front Exhaust Pipe.>
- 10) Lower the vehicle.
- 11) Pour gear oil through the gauge hole. <Ref. to 5MT-23, REPLACEMENT, Transmission Gear Oil.>