


5. Front Seat Belt

A: REMOVAL


1. FRONT OUTER BELT

- 1) Before working, turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds.
- 2) Fold the backrest all the way forward, and then move the front seat all the way forward.
- 3) Remove the center pillar lower trim. <Ref. to EI-42, REMOVAL, Lower Inner Trim.>
- 4) For vehicles equipped with a occupant detection system, remove the passenger's side hinge cover outer cap. (Vehicles prior to V.I.N. 733000)

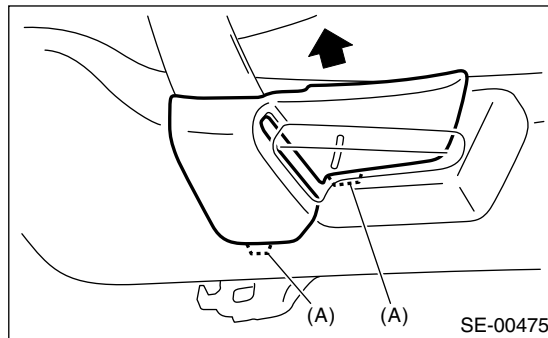


(A) Claw section


- 5) Remove the anchor cover. Loosen the shoulder anchor bolt, and then detach the shoulder anchor from center pillar.

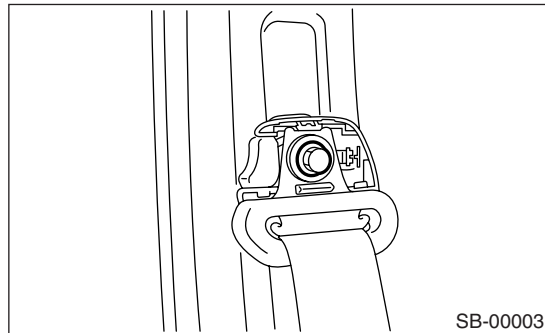

- 6) Pull off the floor mat to remove the bolt. For vehicles equipped with a occupant detection system, disconnect the belt tension sensor connector. (Vehicles after V.I.N. 733001)

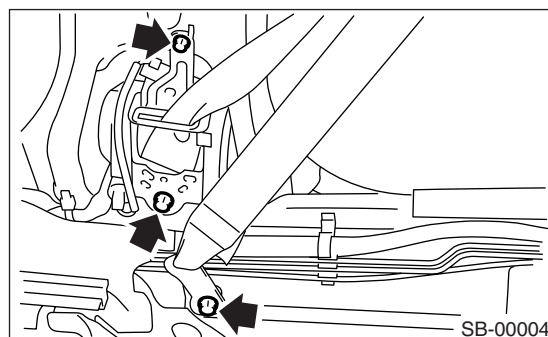

- 7) Disconnect the yellow connector of pretensioner harness, and remove the front outer belt.
- 8) Remove the center pillar upper trim. <Ref. to EI-41, REMOVAL, Upper Inner Trim.>
- 9) Remove the two bolts to remove the adjustable anchor assembly.

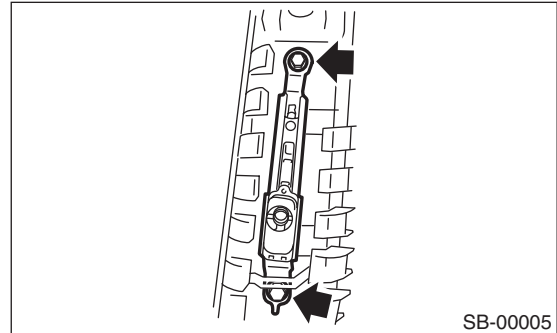


CAUTION:

- Do not drop or apply any impact to the pretensioner.
- Since the pretensioner and bracket are integrated as a unit, do not disassemble them.

2. FRONT INNER BELT

- 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds.
- 2) Remove the console box. <Ref. to EI-37, REMOVAL, Console Box.>
- 3) Disconnect the seat belt warning light connector under the seat.
- 4) Remove the harness clips from the seat rail.
- 5) Remove the anchor bolt, and then detach the inner belt.

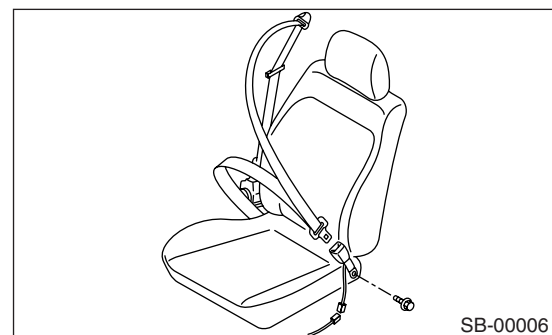

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- The parts on right and left are not identical. Before installation, make sure that the correct part is used.
- Be careful not to twist the belts during installation.

Tightening torque:

<Ref. to SB-2, FRONT SEAT BELT, COMPONENT, General Description.>

C: INSPECTION

Check for the following, and replace with new parts if necessary.

- Pretensioner is cracked or deformed.
- Seat belt is slackened, bent or worn. Seat belt is abnormally wound or extended.
- Inner belt is deformed or damaged.
- Seat belt buckle cannot be engaged properly.