


10. Fuel Tank Pressure Sensor

A: REMOVAL


WARNING:

- Place "NO FIRE" signs near the working area.
- Be careful not to spill fuel.


- 1) Remove the fuel tank. <Ref. to FU(H4SO)-45, REMOVAL, Fuel Tank.>
- 2) Remove the protect cover.

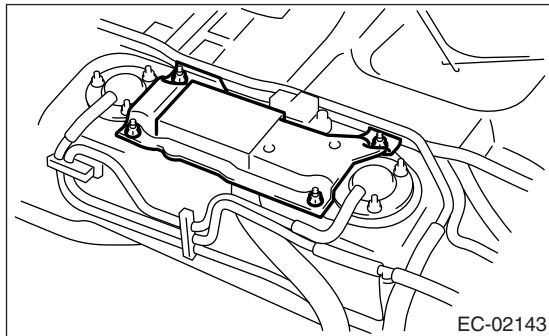


- 3) Disconnect the connector from the fuel tank pressure sensor.
- 4) Remove the clip which holds the fuel pipe to the fuel tank.

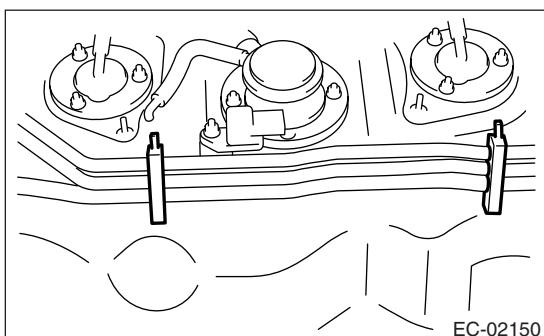

- 5) Remove the bolt and nut which secures the fuel tank pressure sensor to the bracket.

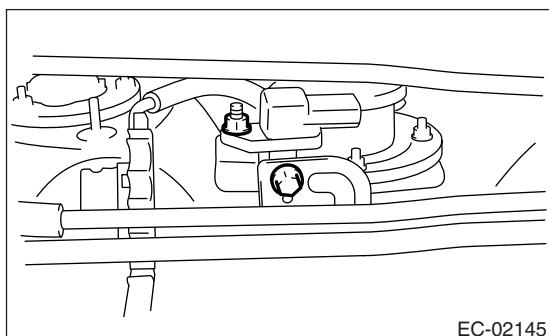

- 6) Disconnect the pressure hose from the fuel tank pressure sensor.

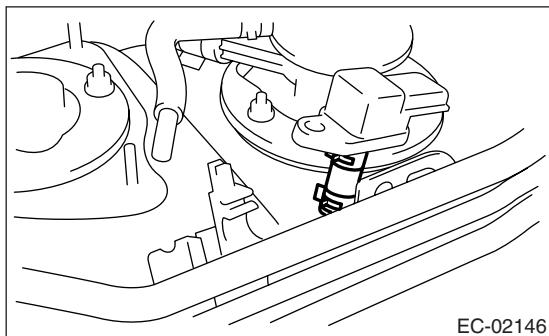


B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

7.4 N·m (0.75 kgf·m, 5.4 ft-lb)

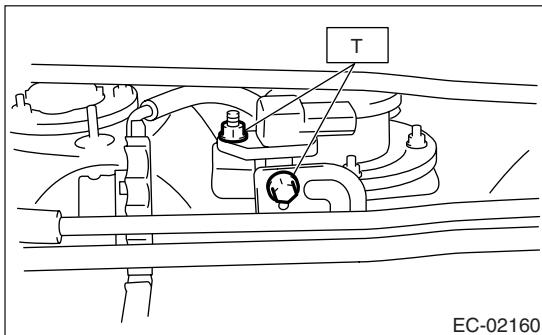

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft-lb)

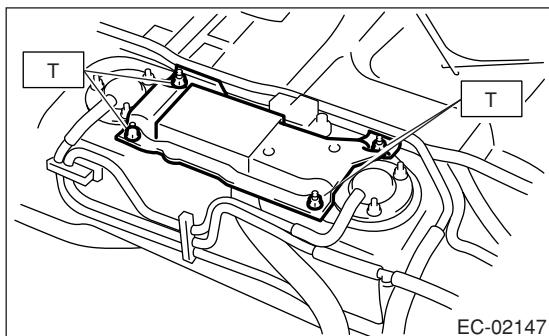

C: INSPECTION

Make sure the hoses are not cracked or loose.