
3. Sunroof Lid

A: REMOVAL

- 1) Completely close the sunroof lid, and then open the sunshade.
- 2) Remove the four covers (A), and then remove the eight nuts.

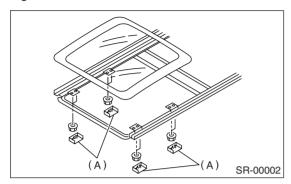

3) Remove the sunroof lid carefully.

B: INSTALLATION

Install in the reverse order of removal.


C: ADJUSTMENT

1. ALIGNMENT OF HEIGHT BETWEEN SUNROOF LID AND ROOF PANEL

Loosen the sunroof lid nuts, and then adjust the height by adding (max: four pieces) or extracting (min: zero pieces) shims (normally two pieces) which are installed between the sunroof lid and the roof panel.

Difference of height between sunroof lid and roof panel:

2.0±1.0 mm (0.079±0.039 in)

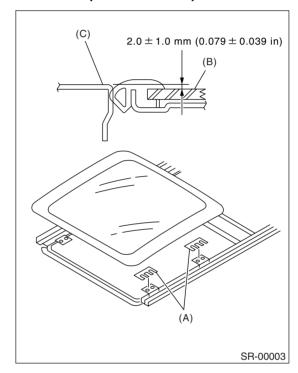

- (A) Shim
- (B) Sunroof lid
- (C) Roof panel